


**LEGEND:**  
 ⊕ Groundwater Monitoring Well Location  
 ● Soil Boring Location



<b>GEOCON</b> CONSULTANTS INC. 2356 RESEARCH DRIVE, LIVERMORE, CALIFORNIA, 94550 PHONE 925 371-5900 - FAX 925 371-5915	
<b>Former Hegenberger Maintenance Station</b>	
Oakland, California	<b>SITE PLAN</b>
GEOCON Proj. No. E8100-06-13	
Task Order No. 04-987901-VM	June 2002
Figure 2	

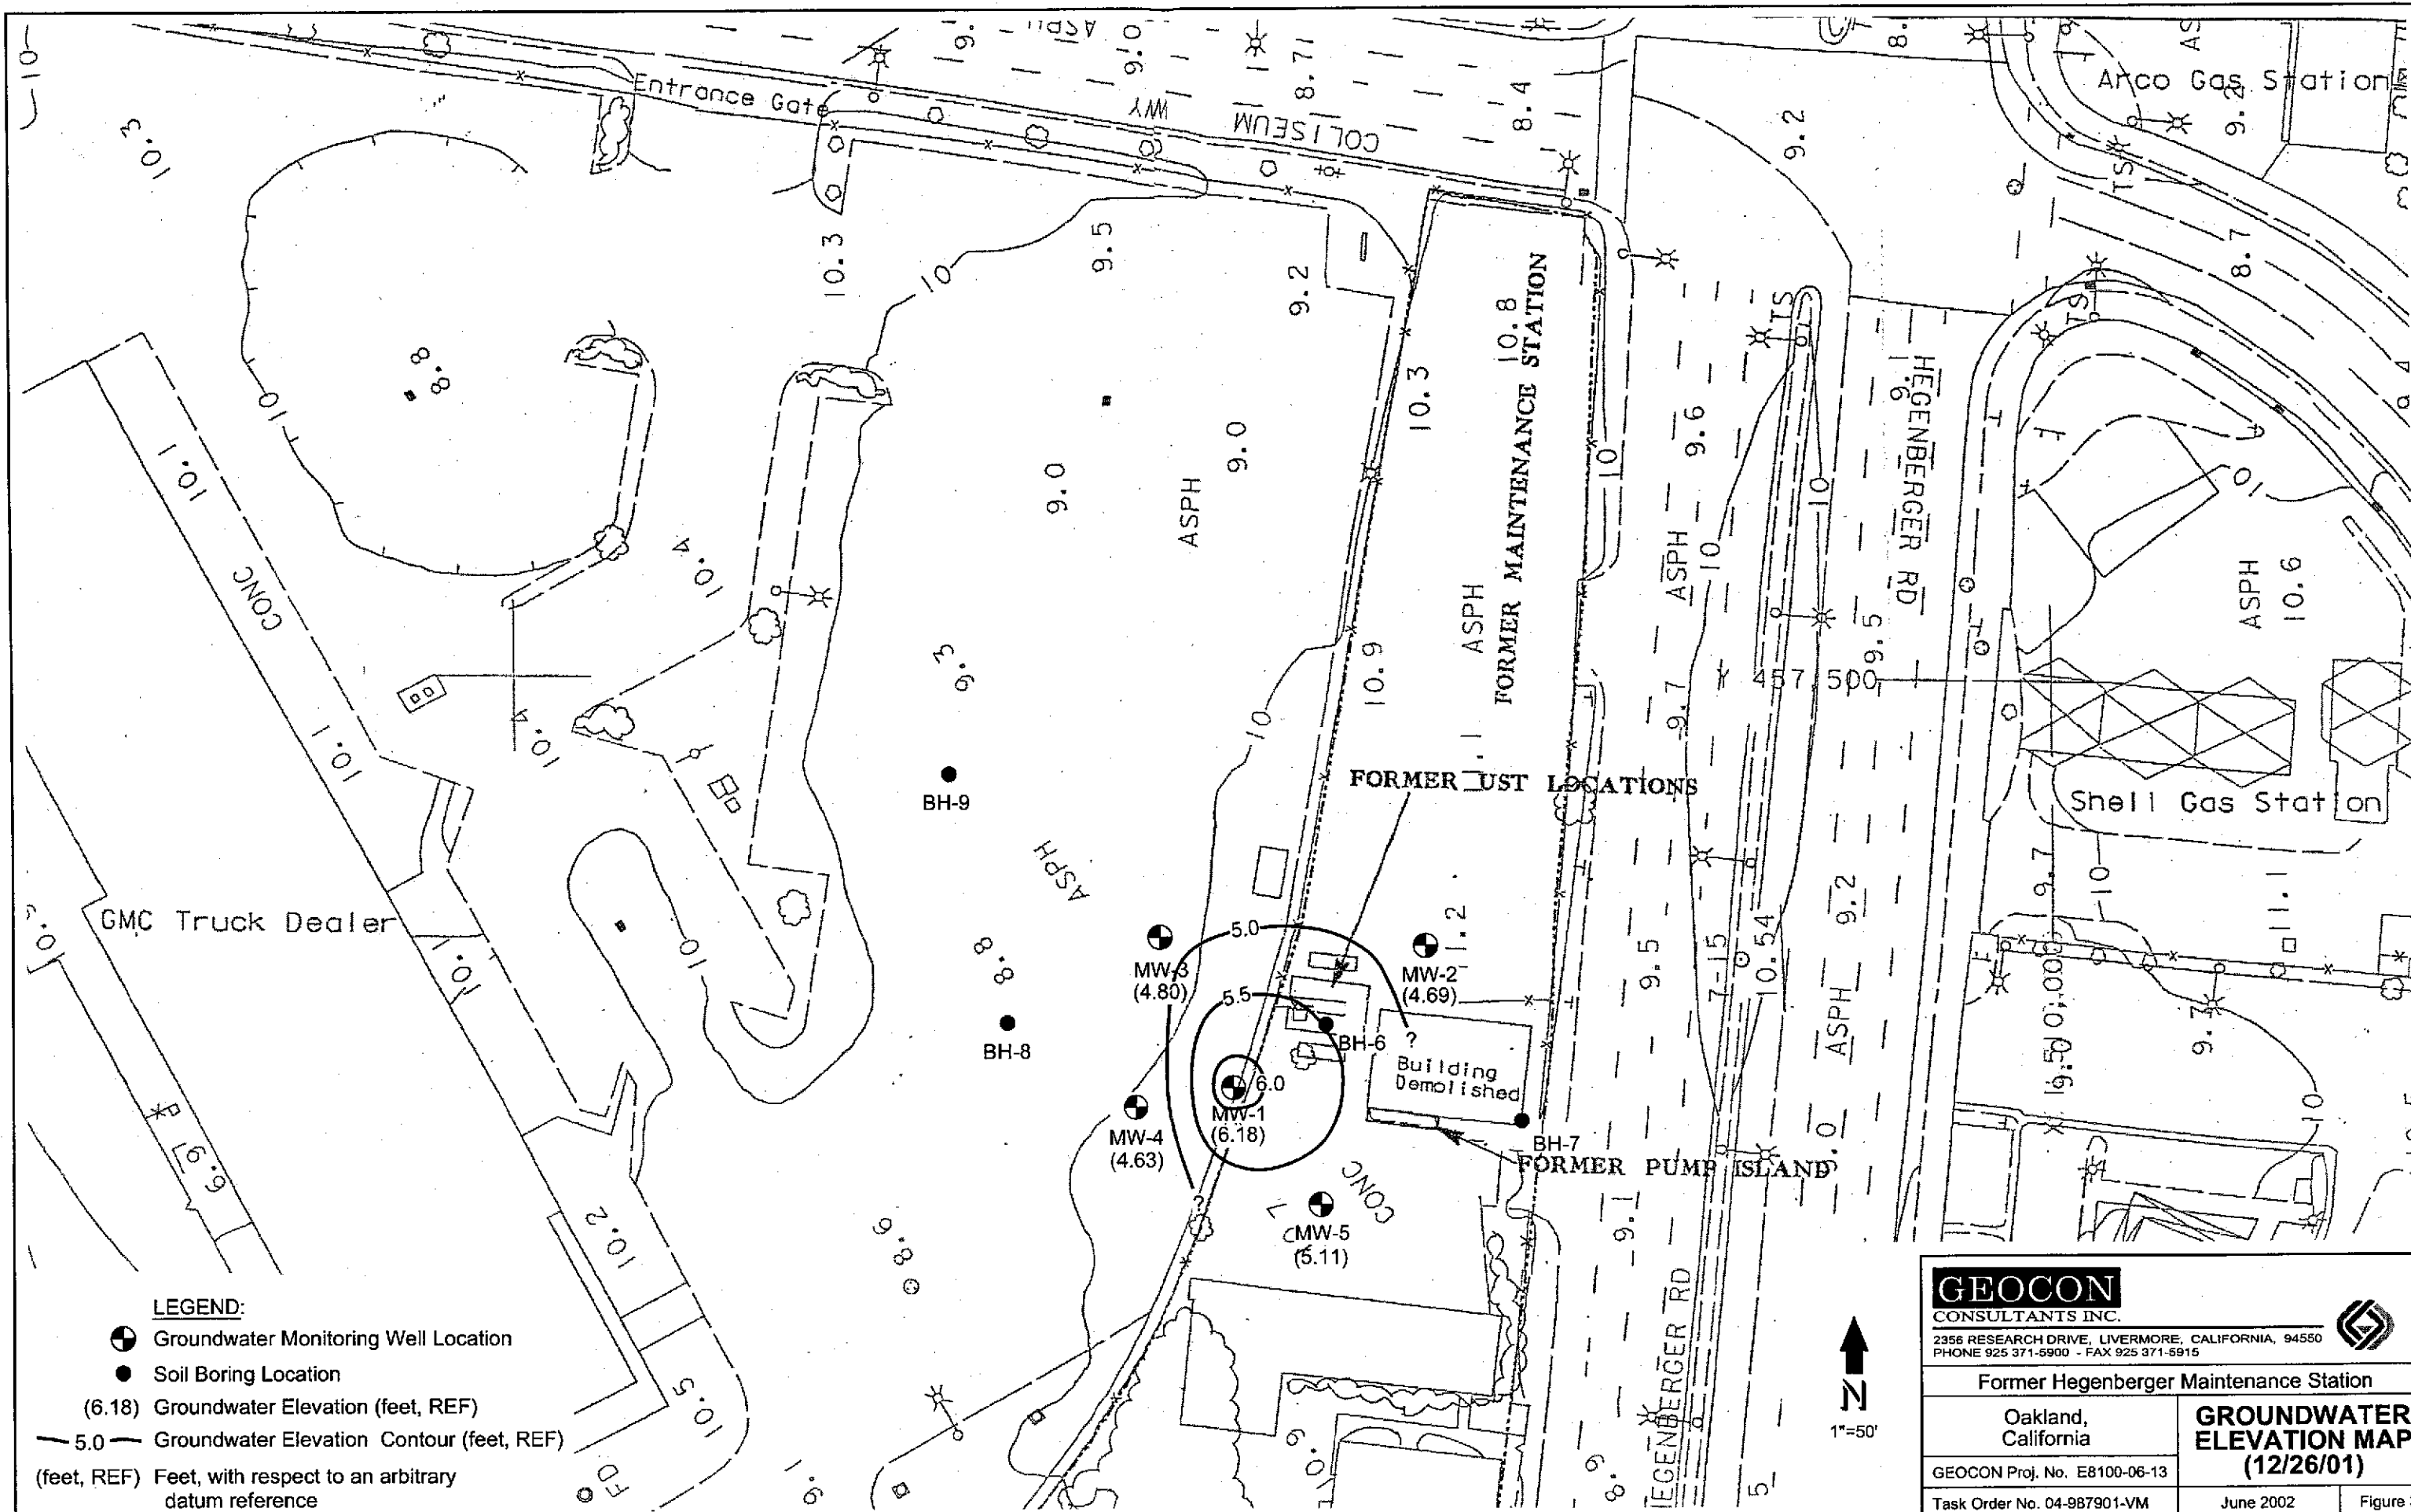


**LEGEND:**

- Groundwater Monitoring Well Location
- Soil Boring Location
- (6.18) Groundwater Elevation (feet, REF)
- 5.0 — Groundwater Elevation Contour (feet, REF)
- (feet, REF) Feet, with respect to an arbitrary datum reference



<b>GEOCON</b> CONSULTANTS INC. 2356 RESEARCH DRIVE, LIVERMORE, CALIFORNIA, 94550 PHONE 925 371-5900 - FAX 925 371-5915	
Former Hegenberger Maintenance Station	
Oakland, California	<b>GROUNDWATER          ELEVATION MAP</b> (12/26/01)
GEOCON Proj. No. E8100-06-13	Task Order No. 04-987901-VM
June 2002	Figure 3

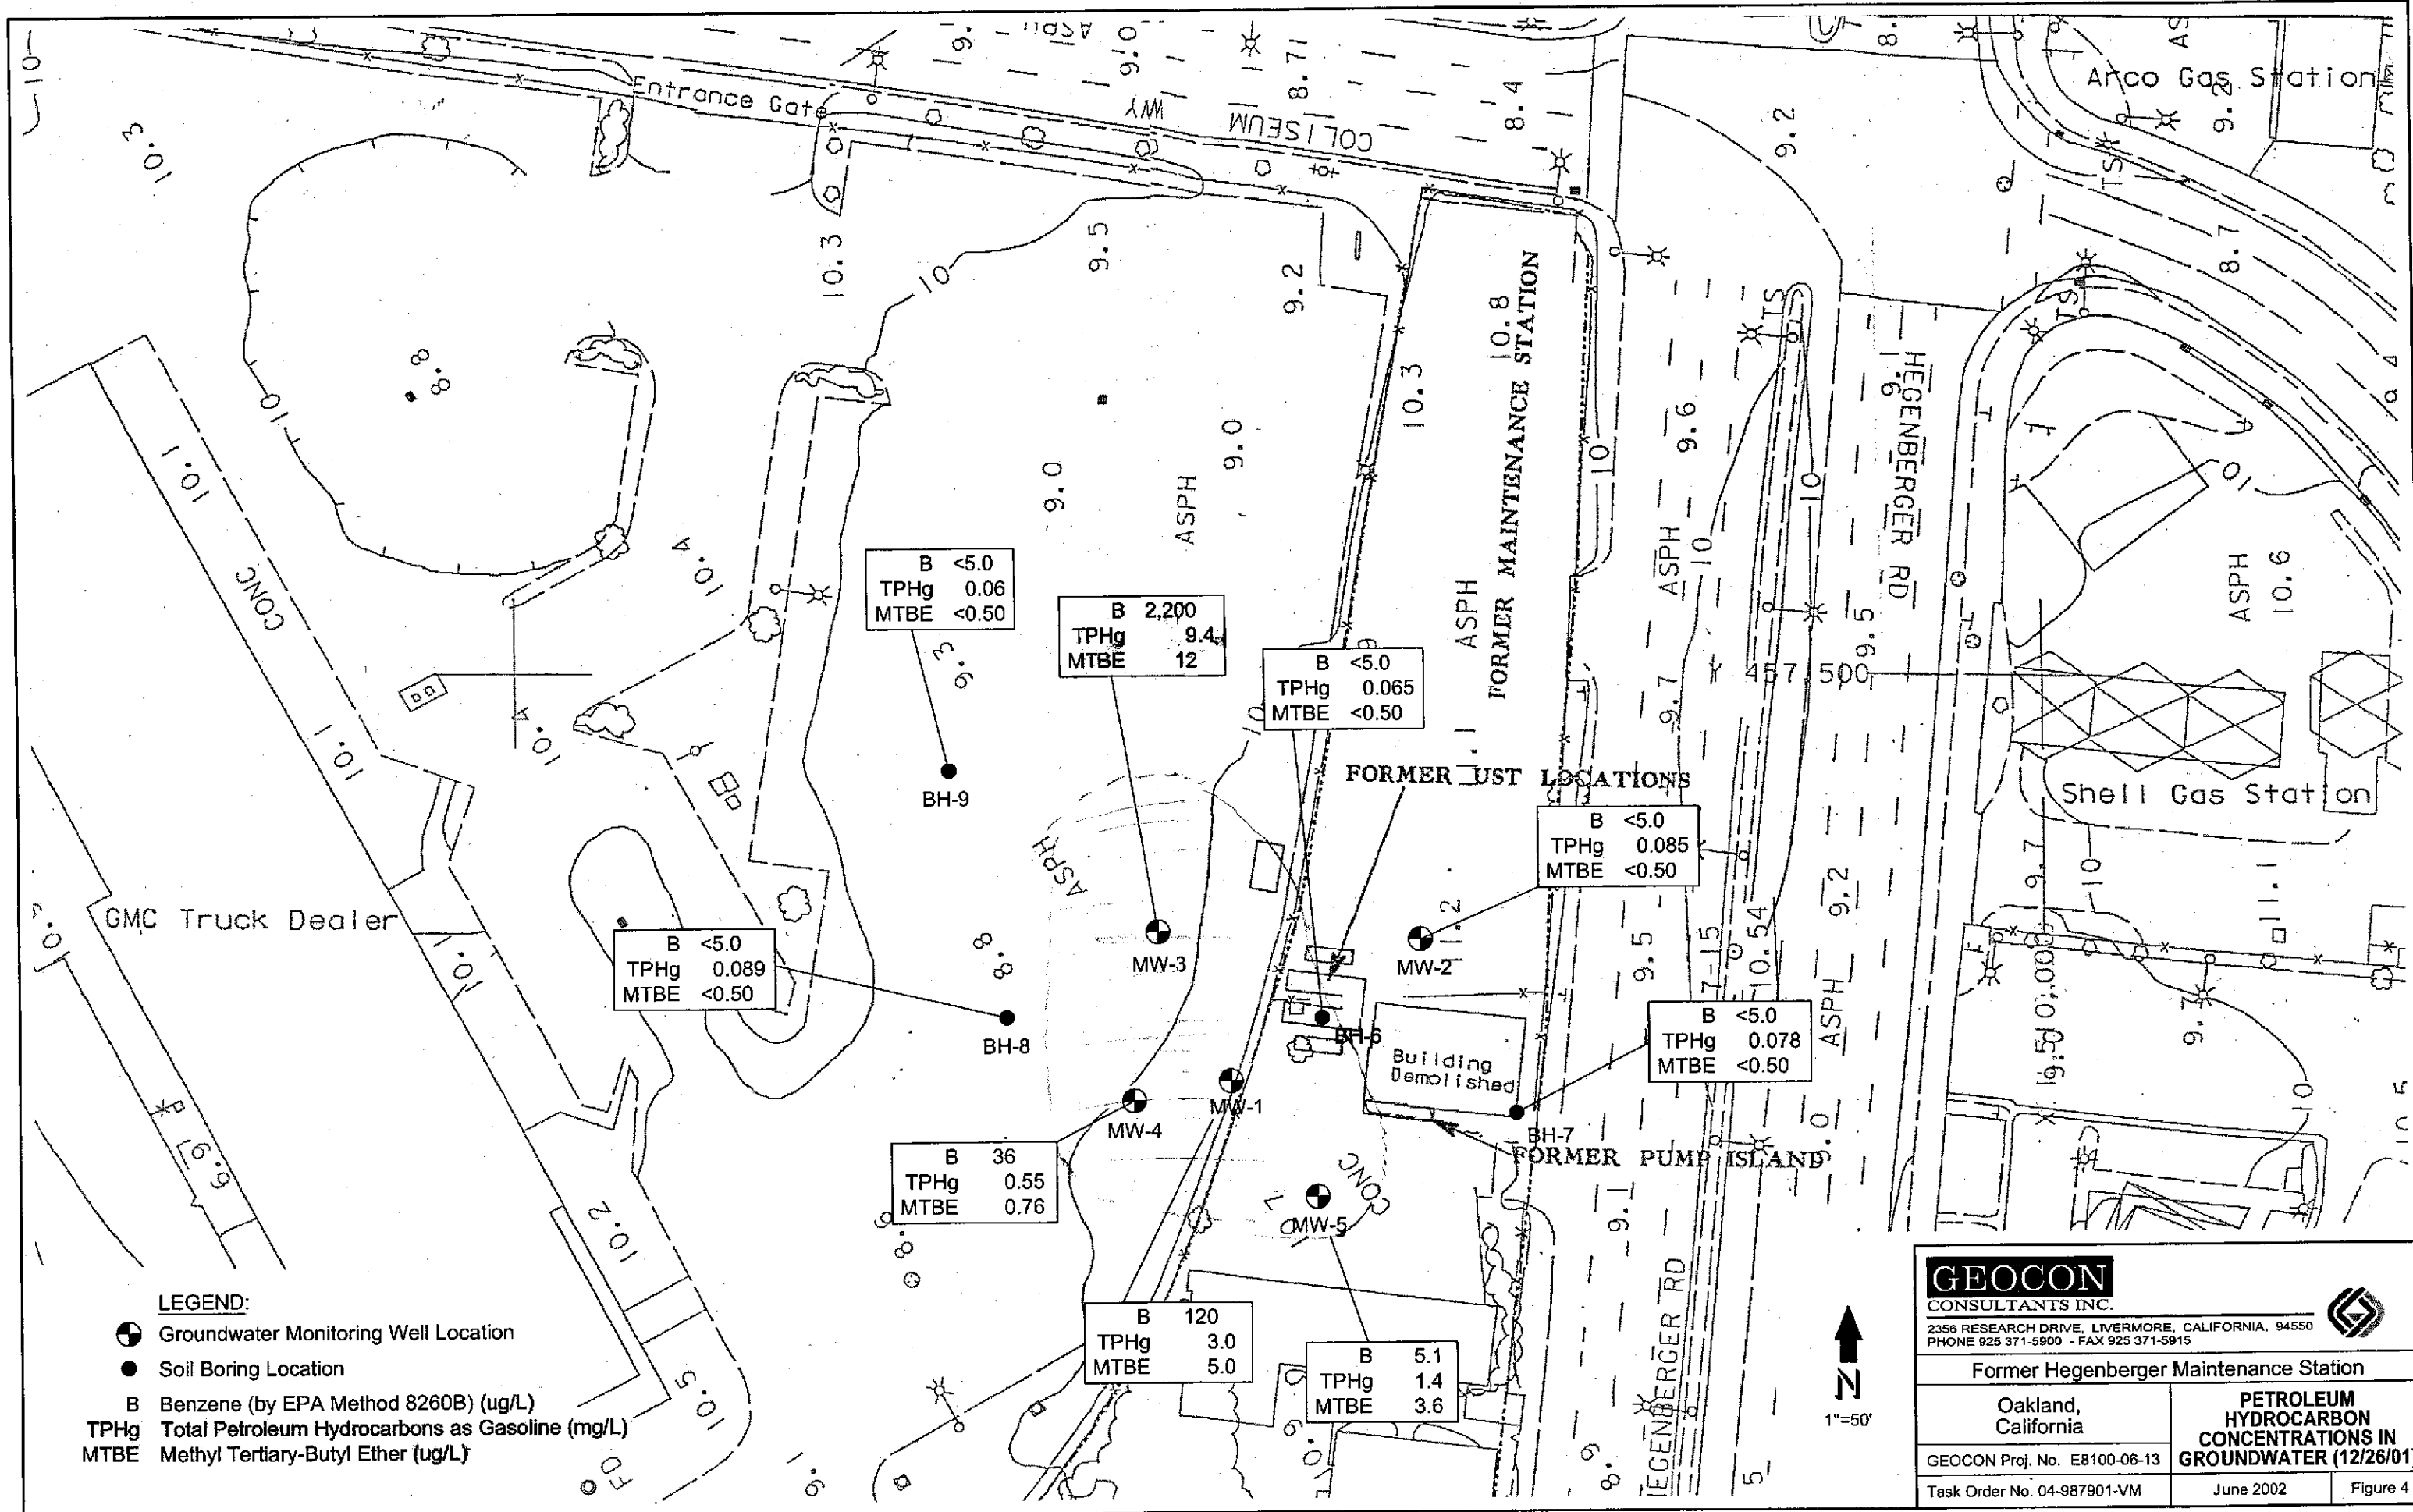

**GEOCON**  
CONSULTANTS INC.

2356 RESEARCH DRIVE, LIVERMORE, CALIFORNIA, 94550  
PHONE 925 371-5900 - FAX 925 371-5915

**Former Hegenberger Maintenance Station**

Oakland, California	<b>PETROLEUM HYDROCARBON CONCENTRATIONS IN GROUNDWATER (12/26/01)</b>	
GEOCON Proj. No. E8100-06-13	June 2002	Figure 4
Task Order No. 04-987901-VM		