

**LEGEND:**

- Groundwater Monitoring Well Location
- Soil Boring Location
- (6.18) Groundwater Elevation (feet, REF)
- 5.0 - Groundwater Elevation Contour (feet, REF)
- (feet, REF) Feet, with respect to an arbitrary datum reference

**GEOCON**  
CONSULTANTS INC.



2356 RESEARCH DRIVE, LIVERMORE, CALIFORNIA, 94550  
PHONE 925 371-5900 - FAX 925 371-5915

Former Hegenberger Maintenance Station

Oakland,  
California


**GROUNDWATER  
ELEVATION MAP  
(12/26/01)**

GEOCON Proj. No. E8100-06-13

Task Order No. 04-987901-VM

June 2002

Figure 3

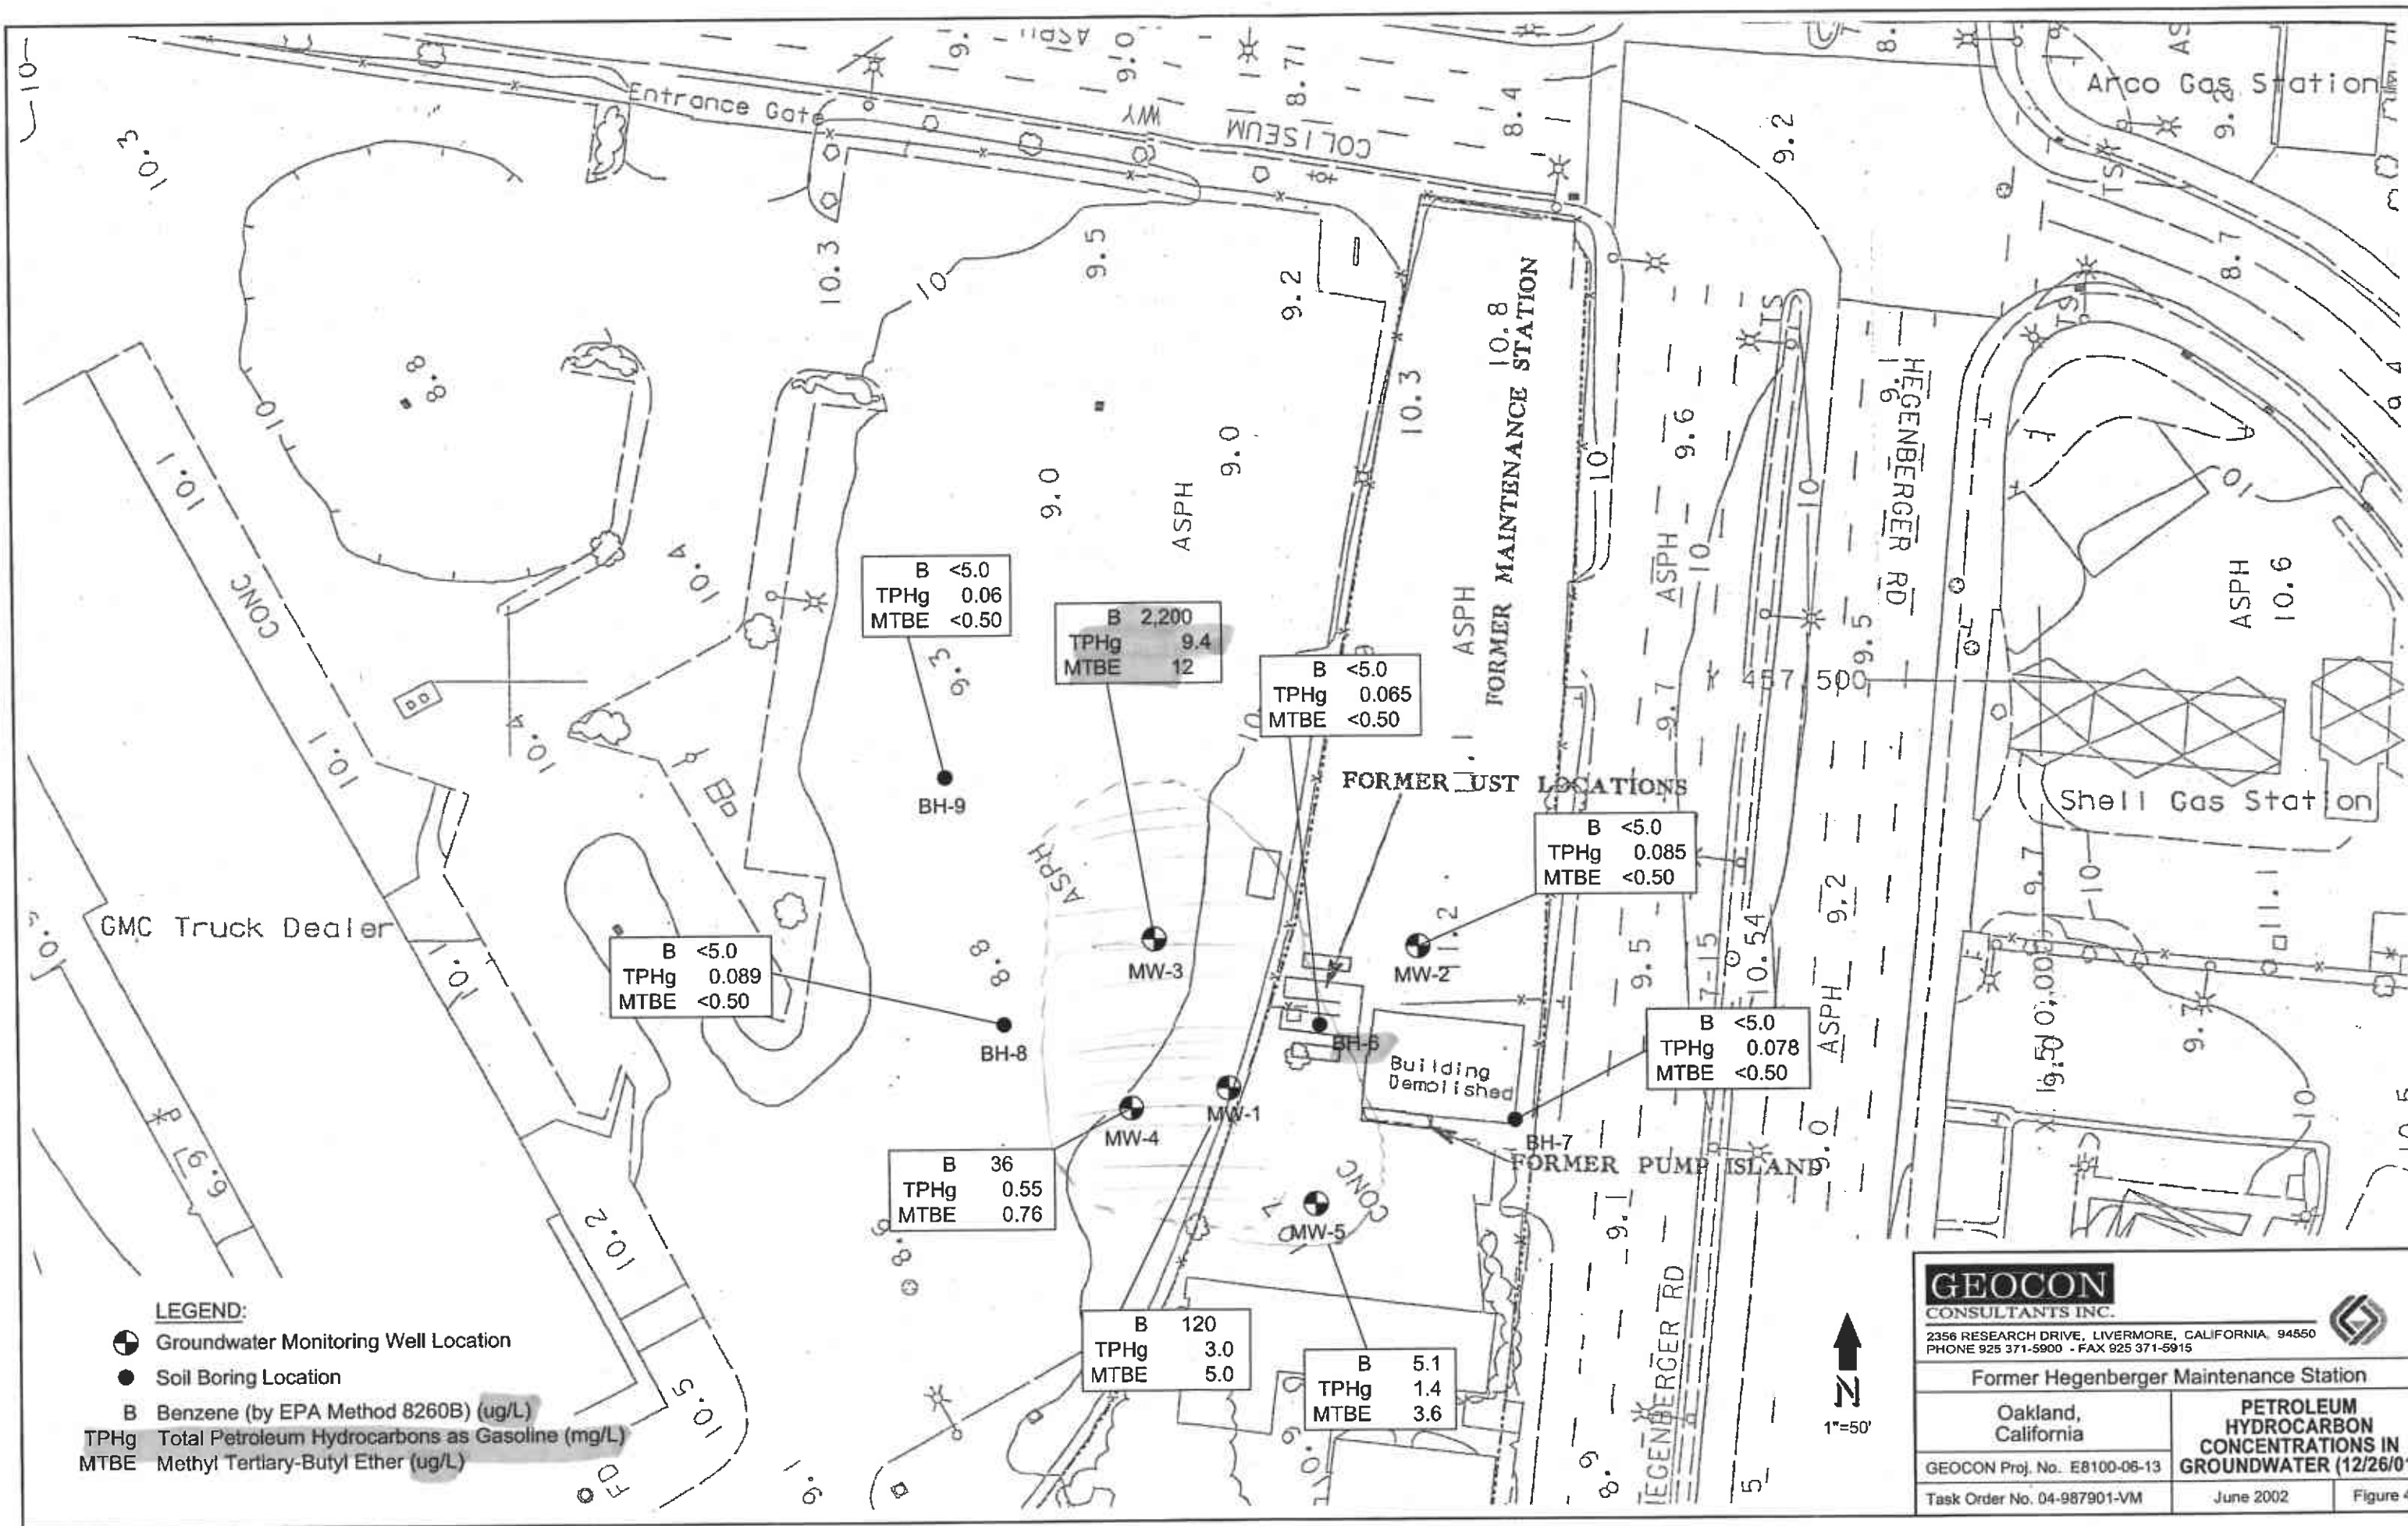

**GEOCON**  
CONSULTANTS INC.

2356 RESEARCH DRIVE, LIVERMORE, CALIFORNIA, 94550  
PHONE 925 371-5900 - FAX 925 371-5915

Former Hegenberger Maintenance Station

Oakland, California	<b>PETROLEUM HYDROCARBON CONCENTRATIONS IN GROUNDWATER (12/26/01)</b>
GEOCON Proj. No. E8100-06-13	June 2002
Task Order No. 04-987901-VM	Figure 4