

Chevron U.S.A. Products Company

2410 Camino Ramon, San Ramon, California • Phone (510) 842-9500 Mail Address: P.O. Box 5004, San Ramon, CA 94583-0804

Marketing Department

July 15, 1992

STED 436

Mr. Rafat Shahid Alameda County Environmental Health 80 Swan Way, Room 200 Oakland, CA 94621

Re: Chevron Service Station No. 9-1740

6550 Moraga Avenue, Oakland, CA 94611

Mr. Shahid:

Enclosed is the quarterly groundwater monitoring and sampling report dated July 9, 1992.

Again well sample C-3 was nondetect for total purgeable petroleum hydrocarbon as gasoline (TPPH-G), benzene, toluene, ethylbenzene, and xylenes (BTEX). Sample C-1 contained 60 ppb TPPH-G, 19 ppb benzene, 1.1 ppb toluene, 1.1 ppb ethylbenzene, and 1.0 ppb xylenes, and C-2 had 190 ppb TPPH-G, 45 ppb benzene, 4.5 ppb toluene, 9.5 ppb ethylbenzene, and 10 ppb xylenes. Something that appears to be product having a thickness of 0.30 feet was present in a 2 inch well C-4. Depth to groundwater ranged from 3.76 feet to 5.67 feet.

The slight increase in product may again be attributable to surface run-off since the caps were replaced a day before the samples were taken. Also, the product was not bailed during the previous quarter and it is probably an accumulation of this quarter and last quarter product. The product will be removed.

If you have any questions or comments, please feel free to call me at (510) 842-8752.

Sincerely,

Chevron U.S.A. Products Co.

Kenneth Kan Engineer

LKAN/MacFile 9-1740R2

Enclosure

cc: Mr. Eddy So, RWQCB-S.F.Bay Region 2101 Webster Street, Suite 500, Oakland, CA 94612

Mr. Steve Willer, Chevron U.S.A. Products Co.

JH 14 92 JST

July 9, 1992



Kenneth Kan Chevron USA P.O. Box 5004 San Ramon, CA 94583

Re:

Chevron Service Station #9-1740

6550 Moraga Avenue Oakland, California SES Project #1-221-04

Dear Mr. Kan:

This report presents the results of the quarterly ground water sampling at Chevron Service Station #9-1740, located at 6550 Moraga Avenue in Oakland, California (Figure 1, Appendix A). Three wells, C-1 through C-3, were sampled (Figure 2, Appendix A).

On June 23, 1992, SES personnel visited the site. Water level measurements were collected in all site wells and all wells were checked for the presence of free-phase hydrocarbons. Free-phase hydrocarbons were present in well C-4. Water level data are shown in Table 1 (Appendix B) and a ground water elevation contour map is included as Figure 2 (Appendix A).

Ground water samples were collected on June 23, 1992 in accordance with SES Standard Operating Procedure - Ground Water Sampling (Appendix C). All analyses were performed by Superior Analytical Laboratory of Martinez, California. Analytic results for ground water are presented in Table 2 (Appendix B). The chain of custody document and laboratory analytic reports are included in Appendix D. SES is not responsible for laboratory omissions or errors.

Thank you for allowing us to provide services to Chevron USA. Please call if you have any questions.

Sincerely.

Sierra Environmental Services

Chris J. Bramer

Environmental Project Manager

Roger Greenstelder

Registered Geologist #003011

CJB/RG/lv 22104QM.JL2

Appendices

A - Figures

B - Tables

C - SES Standard Operating Procedure

D - Chain of Custody Document and Laboratory Analytic Reports

ERED GEOLOG R. W. GREENSFELDER Ne 003011

OF CALIF

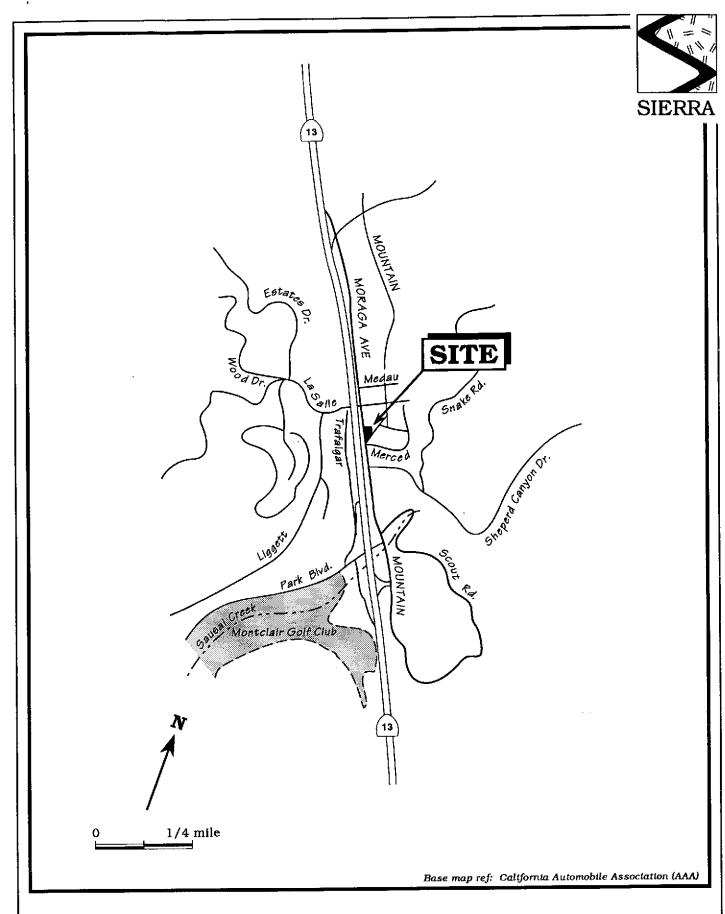


Figure 1. Site Location Map - Chevron Service Station #9-1740, 6550 Moraga Avenue, Oakland, California

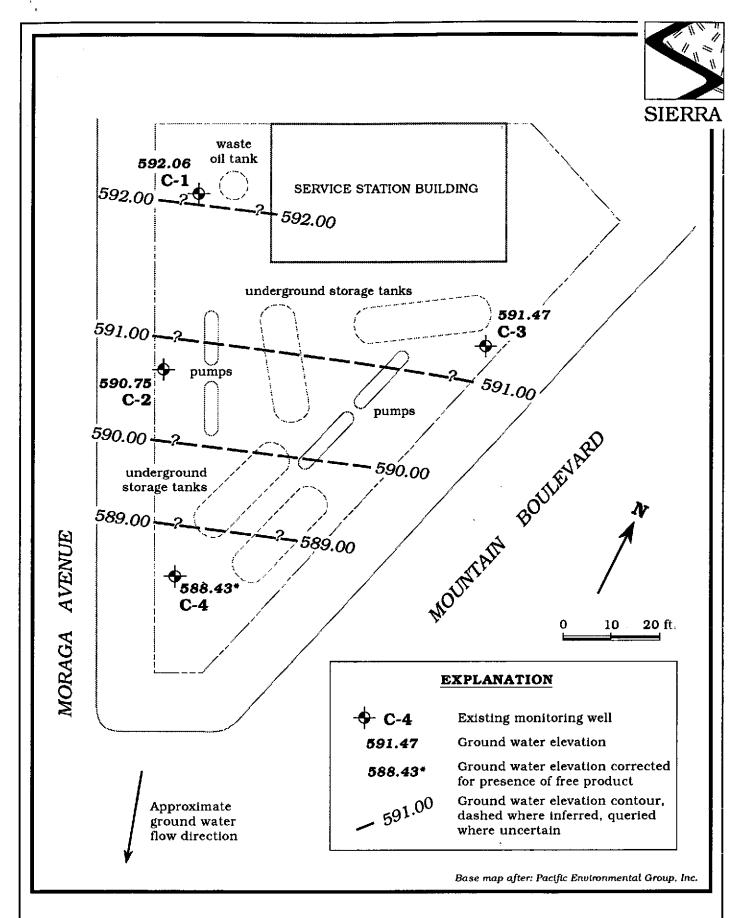


Figure 2. Monitoring Well Locations and Ground Water Elevation Contour Map - June 23, 1992 - Chevron Service Station #9-1740, 6550 Moraga Avenue, Oakland, California



Table 1. Water Level Data and Well Construction Details - Chevron Service Station #9-1740, 6550 Moraga Avenue, Oakland, California

Well ID	Date Measured	DTW (ft)	TOC (ft)	GWE (msl)	Product Thickness* (ft)	Screen Interval <	Sand Pack Interval -feet below grade	Bentonite/Grout Interval >
	· · · · · · · · · · · · · · · · · · ·						•	
C-1	3/25/91	3.28	595.82	592.54	0	5 - 25	4 - 25	0 - 4
	7/1/91	3.43		592.39	0			
	9/25/91	4.15		591.67	0			
	12/23/91	3.71		592.11	0			
	3/24/92	3.02		592.80	0			
	6/23/92	3.76		592.06				
C-2	3/25/91	22.89	594.57	571.68	o	5 - 25	4 - 25	0 - 4
	7/1/91	7.37		587.20	0			
	9/25/91	6.98		587.59	0			
	12/23/91	5.01		589.56	0			
	3/24/92		•	577.30	0			
	6/23/92	-5.82		590.75				
C-3	3/25/91	5.16	597.14	591.98	0	5 - 25	4 - 25	0 - 4
•	7/1/91	5.84		591.30	, O			
	9/25/91	5.94		591.20	0			
	12/23/91	5.94		591.20	0			
	3/24/92	4.77		592.37	0			
	6/23/92	5.67		591.47				
C-4	3/25/91	4.45	593.10	588.65	o	5 - 25	4 - 25	0 - 4
	7/1/91	5.33		587.77	Ō			
	9/25/91	5.50		587.60	Ō			
	12/23/91	4.92		588.18	0			
	3/24/92	4.19				.		
	6/23/92	4.91		4		7		



Table 1. Water Level Data and Well Construction Details - Chevron Service Station #9-1740, 6550 Moraga Avenue, Oakland, California (continued)

EXPLANATION:

DTW = Depth to water

TOC = Top of casing elevation

GWE = Ground water elevation

msl = Measurements referenced relative to mean sea level

NOTES:

Depth to water measurements prior to July 1, 1991, top of casing elevations, and well construction details were compiled from the Soil and Groundwater Investigation Report prepared for this service station by Pacific Environmental Group, Inc. dated June 13, 1991.

Product thickness measurements prior to July 1, 1991 were measured with a clear teflon bailer. Measurements made since July 1, 1991 used an MMC flexi-dip interface probe.

GWE corrected for presence of free-phase hydrocarbons using the formula:

22104T.WL



Table 2. Analytic Results for Ground Water - Chevron Service Station #9-1740, 6550 Moraga Avenue, Oakland, California

Well ID	Date Sampled	Analytic Lab	Analytic Method	TPPH(G) <	TPH(D)	O&G	Bppb	Т	E	>
 C-1	3/25/91	SAL	8015/8020/503E	54	<50	<5,000	0.7	<0.5	<0.5	2
0.	7/1/91	SAL	8015/8020	730			250	3.0	16	4.8
	9/25/91	SAL	8015/8020	160			68	1.3	6.1	1.3
	12/23/91	SPA	8015/8020	170			70	1.6	3.5	2.4
	3/24/92	SPA	8015/8020	60			20		3.9	0.1_
	6/23/92	SPA	8015/8020		_	 :		<u> </u>		
C-2	3/25/91	SAL	8015/8020	; < 50	<50		1	<0.5	<0.5	2
	7/1/91	SAL	8015/8020	660			190	2.5	28	22
	9/25/91	SAL	8015/8020	110			200	1.9	21	1.7
	12/23/91	SPA	8015/8020	<50			1.2	1.2	<0.5	1.8
	3/24/92	SPA	8015/8020	100			5.9	7.9	4 ;	14
	6/23/92	SPA	8015/8020				***			
C-3	3/25/91	SAL	8015/8020	<50	<50		<0.5	<0.5	<0.5	0.5
	7/1/91	SAL	8015/8020	<50			<0.5	<0.5	< 0.5	< 0.5
	9/25/91	SAL	8015/8020	<50			<0.5	< 0.5	< 0.5	<0.5
	12/23/91	SPA	8015/8020	<50			1.0	< 0.5	< 0.5	1.5
	3/24/92	SPA	8015/8020	<50			< <u>0.5</u>	<0.5	< 0.5	<0.5
	6/23/92	SPA	8015/8020	<50						
C-4	3/25/91	SAL	8015/8020	2,700	<50		240	16	<0.5	350
	7/1/91	SAL	8015/8020	7,900			1,500	230	340	350
	9/25/91	SAL	8015/8020	3,200			850	160	150	220
	12/23/91	SPA	8015/8020				المرخانة		40	240
	3/24/92*	SPA	8015/8020							
	6/23/92*		:							
Trip Blank	3/25/91	SAL	8015/8020	<50			<0.5	<0.5	<0.5	<0.5
(AA)	7/1/91	SAL	8015/8020	<50			<0.5	<0.5	< 0.5	<0.5
	9/25/91	SAL	8015/8020	<50			< 0.5	<0.5	<0.5	<0.5
	12/23/91	SPA	8015/8020	<50			<0.5	< 0.5	<0.5	< 0.5
	3/24/92	SPA	8015/8020	<50			<0.5	< 0.5	< 0.5	<0.5
	6/23/92	SPA	8015/8020	<50			<0.5	<0.5	<0.5	<0.5



Table 2. Analytic Results for Ground Water - Chevron Service Station #9-1740, 6550 Moraga Avenue, Oakland, California (continued)

Well ID	Date Sampled	Analytic Lab	Analytic Method	TPPH(G) <	TPH(D)	O&G	B - <i>ppb</i>	т	E	X >
Bailer Blank	3/25/91	SAL	8015/8020	<50			<0.5	<0.5	<0.5	<0.5
(BB)	7/1/91	SAL	8015/8020	<50			< 0.5	<0.5	<0.5	<0.5
()	9/25/91	SAL	8015/8020	<50			< 0.5	<0.5	< 0.5	< 0.5
	12/23/91	SPA	8015/8020	<50			< 0.5	<0.5	< 0.5	<0.5
	3/24/92	SPA	8015/8020	<50			< 0.5	<0.5	< 0.5	< 0.5
	6/23/92	SPA	8015/8020	<50			<0.5	<0.5	<0.5	<0.5

EXPLANATION:

TPPH(G) = Total Purgeable Petroleum Hydrocarbons as Gasoline TPH(D) = Total Petroleum Hydrocarbons as Diesel

O&G = Oil and Grease

B = Benzene

T = Toluene

E = Ethylbenzene

X = Xylenes

ppb = Parts per billion

--- = Not analyzed/Not applicable

ANALYTIC METHODS:

8015 = EPA Method 8015/5030 for TPPH(G)

8015 = EPA Method 8015 for TPH(D)

8020 = EPA Method 8020 for BTEX

503E = Standard Methods Method 503E for O&G

ANALYTIC LABORATORIES:

SAL = Superior Analytic Laboratory of Martinez, California

SPA = Superior Precision Analytical, Inc. of Martinez, California

NOTE:

Analytic data prior to July 1, 1991 were compiled from the Soil and Groundwater Investigation Report prepared for this service station by Pacific Environmental Group, Inc. dated June 13, 1991.

* Product was measured in this well, therefore it was not sampled.



APPENDIX C SIERRA ENVIRONMENTAL SERVICES STANDARD OPERATING PROCEDURES



SES STANDARD OPERATING PROCEDURE GROUND WATER SAMPLING - QUARTERLY MONITORING

The following describes sampling procedures used by SES field personnel to collect and handle ground water samples. Before samples are collected, careful consideration is given to the type of analysis to be performed so that precautions are taken to prevent loss of volatile components or contamination of the sample, and to preserve the sample for subsequent analysis. Wells will be sampled no less than 24 hours after well development. Collection methods specific to ground water sampling are presented below.

Prior to sampling, each well is checked for the presence of free-phase hydrocarbons using an MMC flexi-dip interface probe. Product thickness (measured to the nearest 0.01 foot) is noted on the sampling form. Water level measurements are also made using either a water level meter or the interface probe. The water level measurements are also noted on the sampling form.

Prior to sampling, each well is purged of a minimum of three well casing volumes of water using a steam-cleaned PVC bailer, or a pre-cleaned pump. Temperature, pH and electrical conductivity are measured during purging. Purging is continued until these parameters have stabilized for consecutive readings.

Ground water samples are collected from the wells with steam-cleaned Teflon bailers. The water samples are decanted into the appropriate container for the analysis to be performed. Prepreserved sample containers may be used or the analytic laboratory may add preservative to the sample upon arrival. Duplicate samples are collected from each well as a back-up sample and/or to provide quality control. The samples are labeled to include the project number, sample ID, date, preservative, and the field person's initials. The samples are placed in polyethylene bags and in an ice chest (maintained at 4°C with blue ice or ice) for transport under chain of custody to the laboratory.

The chain of custody form includes the project number, analysis requested, sample ID, date analysis and the SES field person's name. The form is signed and dated (with the transfer time) by each person who yields or receives the samples beginning with the field personnel and ending with the laboratory personnel.



A trip blank and bailer blank accompanies each sampling set, or 5% trip blanks and 5% bailer blanks are included for sets of greater than 20 samples. The bailer blank is prepared by pouring previously boiled water into a steam-cleaned Teflon bailer prior to sampling a well. The trip and bailer blanks are analyzed for some or all of the same compounds as the ground water samples.

GWS-QMP2.SOP



APPENDIX D CHAIN OF CUSTODY DOCUMENT AND LABORATORY ANALYTIC REPORTS

understance of								Sh.	,					<u> </u>	Date 9.1					5 (10	Days Days	fig.
inquished By (with	24	2	anization SES anization		0ate/Time 6-23-9 Z 0ate/Time		pelved B				4	Organizai Organizai			/Time			Tum An	24	ne (Circle Hrs. Hrs.	Choloe)
							<u> </u>															

				-				╁──	 				<u> </u>									
													 									· · · · · · · · · · · · · · · · · · ·
											Com	men	:									1
											VO	:2105 ('S W	inout	reads	2000		<i>i</i>					
											You	<u>ropri</u>	die co	nigina	rs							
-2	:	V	W	V	1300	V	<u> </u>	-/-			San	ize in	Stored	in ice			2					
-3			1.		1220		4	1			Di_						up				<u> </u>	
-1 -3					1145		-												ļ			
8B			_		1050										٠.			•			:	
B-LB		340m	W	G	0900	HCL	Yes	/				A 8 9 5	7. 1		菱		÷ -				An	alyte
Sample Nu	Lab Sample	Number of	Matrix S = Soil W = Water	# 0 •q√r # 0 •d√r	Ilme	Sample Pre	load (Yes	BIEX + IPH CAS (8020 + 8015)	TPH Diesei (8015)	Oil and Great (5520)	Purgeable Halocarbons (8010)	Purgecible (8020)	Purgeoble ((8240)	Extroctoble (8270)	Cd,Cr,Pb,Zi (ICAP or A						i. N	i≩fed Ora
mber	• Number	Containera	A = Air · C = Charcool	Grob Composite Discrete		eervation .	or No)	PH CAS 9015)		9604	Halocarbons	Aromatics	Organica	Organics	,Zn,Ni r AA)							
			<u>la</u>				•						· · · · · ·	e To Be	· Perform	ned			/		DO NO	+ Bill
		Pı	rojeat Ca	intact (No S (P)	ome) /// hone)	Lra 13	(Fax	Number	37	79	S 5	4.0	ollection Ignature	Dote	6-2	3-7 - <u>-</u> 7	2 V.					
n Ramon, C/ K (415)84:			idrees	20. 2	546	Marti	naz	. CA	99		7	_ s	emples (Collected	by (Na	me)∠	4ndr	ey.	M	ink	sitz.	100 A
D. BOX 5	004	Coneu	iltant Pro	oject Num ma Sie	ore F	- 22-1-	- OC		2~1	<u>es</u>		- L	aborator) aborator)	Name.	میک	200	<u>- P</u>	reci	3,20		ralyt	-/ <u>///////////////////////////////////</u>
evron U.S.	A Inc		Foolit	ly Numbe ly Address	. <i>Qa</i>	Kland	; 	More	çc.	Ave		-	h evro n ((Phone).	ı		570	08	42	7752	
		I				9-174	0		-				=	. A 15					Kenr	_ 1/	V	-Reco



Superior Precision Analytical, Inc.

825 Arnold Drive, Suite 114 • Martinez, California 94553 • (510) 229-1512 / fax (510) 229-1526

Sierra Environmental	Project	1-221-04
Attn: Chris Bramer	Reported	06/29/92

TOTAL PETROLEUM HYDROCARBONS

Lab #	Sample Identification	Sampled	Analyzed Matrix
86052- 1	TB-LB	06/23/92	06/25/92 Water
86052- 2	BB	06/23/92	06/25/92 Water
86052- 3	C-1	06/23/92	06/25/92 Water
86052- 4	C-3	06/23/92	06/25/92 Water
86052- 5	C-2	06/23/92	06/25/92 Water

RESULTS OF ANALYSIS

Laboratory Number:	86052- 1	86052- 2	86052- 3	86052- 4	86052- 5
Gasoline:	ND<50	ND<50	60 *	ND<50	190
Benzene:	ND<0.5	ND<0.5	19	0.9	45
Toluene:	ND<0.5	ND<0.5	1.1	1.1	4.5
Ethyl Benzene:	ND<0.5	ND<0.5	1.1	0.5	9.5
Xylenes:	ND<0.5	ND<0.5	1.0	1.6	10
Concentration:	ug/L	ug/L	ug/L	ug/L	ug/L

825 Arnold Drive, Suite 114 • Martinez, California 94553 • (510) 229-1512 / fax (510) 229-1526

CERTIFICATE OF ANALYSIS

ANALYSIS FOR TOTAL PETROLEUM HYDROCARBONS

Page 2 of 2 QA/QC INFORMATION SET: 86052

NA = ANALYSIS NOT REQUESTED

ND = ANALYSIS NOT DETECTED ABOVE QUANTITATION LIMIT

ug/L = parts per billion (ppb)

* Gasoline range concentration reported. The chromatogram shows only a single peak in the qasoline range.

OIL AND GREASE ANALYSIS By Standard Methods Method 5520F: Minimum Detection Limit in Water: 5000ug/L

Modified EPA SW-846 Method 8015 for Extractable Hydrocarbons:
Minimum Quantitation Limit for Diesel in Water: 50ug/L

EPA SW-846 Method 8015/5030 Total Purgable Petroleum Hydrocarbons: Minimum Quantitation Limit for Gasoline in Water: 50ug/L

EPA SW-846 Method 8020/BTXE
Minimum Quantitation Limit in Water: 0.5ug/L

ANALYTE	SPIKE LEVEL	MS/MSD RECOVERY	RPD	CONTROL LIMIT
Gasoline:	200 ng	84/85	2	70-130
Benzene:	200 ng	91/90	2	70-130
Toluene:	200 ng	92/92	1	70-130
Ethyl Benzene:	200 ng	97/97	0	70-130
Xylenes:	200 ng	84/83	1	70-130

Richard Srna, Ph.D.

Libonaria V. Janquilia (for)

JUL 14'92 JST

July 9, 1992



Kenneth Kan Chevron USA P.O. Box 5004 San Ramon, CA 94583

Re:

Chevron Service Station #9-1740

6550 Moraga Avenue Oakland, California SES Project #1-221-04

Dear Mr. Kan:

This report presents the results of the quarterly ground water sampling at Chevron Service Station #9-1740, located at 6550 Moraga Avenue in Oakland, California (Figure 1, Appendix A). Three wells, C-1 through C-3, were sampled (Figure 2, Appendix A).

On June 23, 1992, SES personnel visited the site. Water level measurements were collected in all site wells and all wells were checked for the presence of free-phase hydrocarbons. Free-phase hydrocarbons were present in well C-4. Water level data are shown in Table 1 (Appendix B) and a ground water elevation contour map is included as Figure 2 (Appendix A).

Ground water samples were collected on June 23, 1992 in accordance with SES Standard Operating Procedure - Ground Water Sampling (Appendix C). All analyses were performed by Superior Analytical Laboratory of Martinez, California. Analytic results for ground water are presented in Table 2 (Appendix B). The chain of custody document and laboratory analytic reports are included in Appendix D. SES is not responsible for laboratory omissions or errors.

Thank you for allowing us to provide services to Chevron USA. Please call if you have any questions.

Sincerely.

Sierra Environmental Services

Chris J. Bramer

Environmental Project Manager

Roger Greensfelder

Registered Geologist #003011

CJB/RG/lv 22104QM.JL2

Appendices

A - Figures

B - Tables

C - SES Standard Operating Procedure

D - Chain of Custody Document and Laboratory Analytic Reports

OF CALL

R. W. GREENSFELDER

Na 003011

RED GEOLOGY

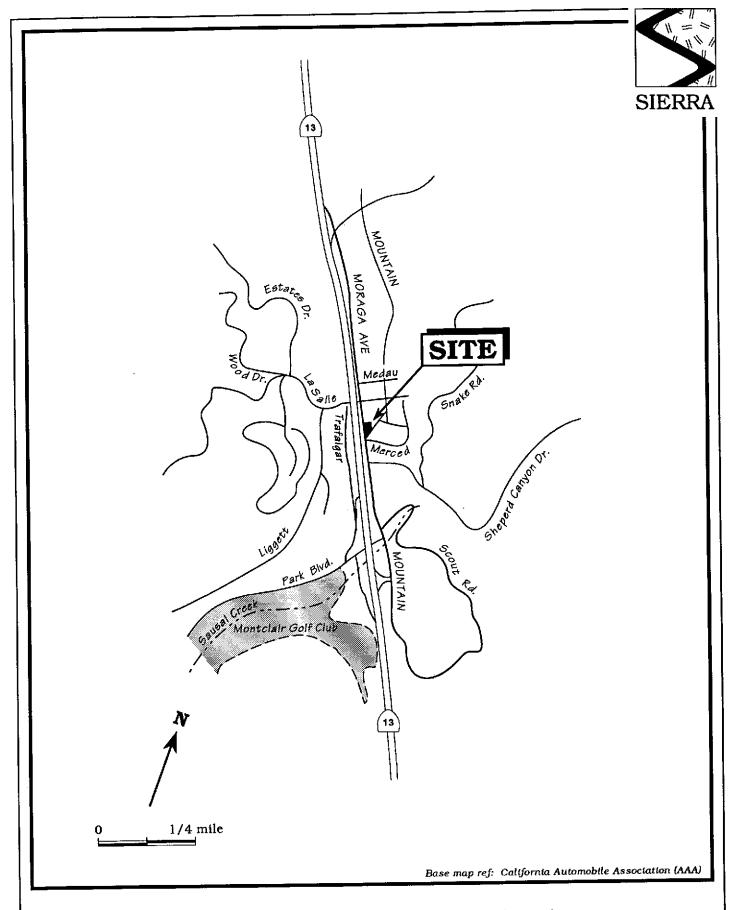


Figure 1. Site Location Map – Chevron Service Station #9-1740, 6550 Moraga Avenue, Oakland, California

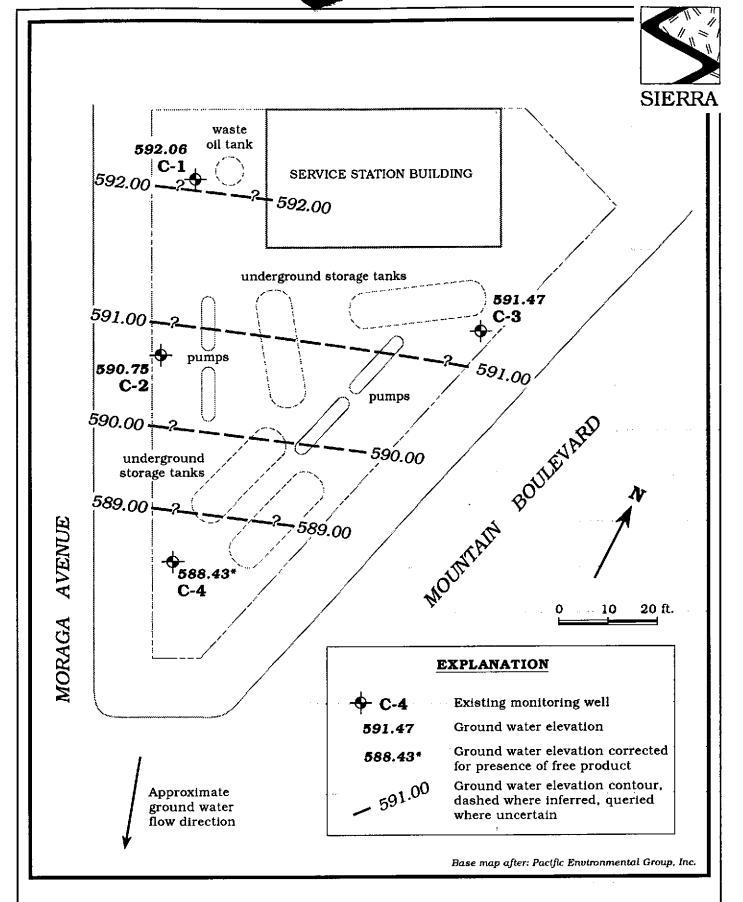


Figure 2. Monitoring Well Locations and Ground Water Elevation Contour Map - June 23, 1992 - Chevron Service Station #9-1740, 6550 Moraga Avenue, Oakland, California



Table 1. Water Level Data and Well Construction Details - Chevron Service Station #9-1740, 6550 Moraga Avenue, Oakland, California

Well ID	Date Measured	DTW (ft)	TOC (ft)	GWE (msl)	Product Thickness* (ft)	Screen Interval	Sand Pack Interval -feet below grade	Bentonite/Grout Interval >
							•	
C-1	3/25/91	3.28	595.82	592.54	0	5 - 25	4 - 25	0 - 4
	7/1/91	3.43		592.39	0			
	9/25/91	4.15		591.67	0			
	12/23/91	3.71		592.11	0			
	3/24/92	3.02		592.80	O			
	6/23/92	3.76		592.06				
C-2	3/25/91	22.89	594.57	571.68	0	5 - 25	4 - 25	0 - 4
	7/1/91	7.37		587.20	0			
	9/25/91	6.98		587.59	0			
	12/23/91	5.01		589.56	0			
	3/24/92	17.27		577.30	0			
	6/23/92	3.82		590.75				
C-3	3/25/91	5.16	597.14	591.98	o	5 - 25	4 - 25	0 - 4
	7/1/91	5.84		591.30	Ó			
	9/25/91	5.94		591.20	0			
	12/23/91	5.94		591.20	0			
	3/24/92	4.77		592.37	0			
	6/23/92	5.67		591.47				
C-4	3/25/91	4.45	593.10	588.65	0	5 - 25	4 - 25	0 - 4
	7/1/91	5.33		587.77	0			
	9/25/91	5.50		587.60	Ó			
	12/23/91	4.92		588.18	0			
	3/24/92	4.19		589.06 ¹	.19			
	6/23/92	4.91		588.43 ¹	.30			



Table 1. Water Level Data and Well Construction Details - Chevron Service Station #9-1740, 6550 Moraga Avenue, Oakland, California (continued)

EXPLANATION:

DTW = Depth to water

TOC = Top of casing elevation

GWE = Ground water elevation

msl = Measurements referenced relative to mean sea level

NOTES:

Depth to water measurements prior to July 1, 1991, top of casing elevations, and well construction details were compiled from the Soil and Groundwater Investigation Report prepared for this service station by Pacific Environmental Group, Inc. dated June 13, 1991.

Product thickness measurements prior to July 1, 1991 were measured with a clear teflon bailer. Measurements made since July 1, 1991 used an MMC flext-dip interface probe.

GWE corrected for presence of free-phase hydrocarbons using the formula: [TOC - DTW] + product thickness x 0.80 (assumed specific gravity of free-phase hydrocarbons).

22104T.WL



Table 2. Analytic Results for Ground Water - Chevron Service Station #9-1740, 6550 Moraga Avenue, Oakland, California

Well ID	Date Sampled	Analytic Lab	Analytic Method	TPPH(G)	TPH(D)	O&G	B <i>ppb</i>	T	E	X >
	Sampled	Lab	Method				рры			
C-1	3/25/91	SAL	8015/8020/503E	54	<50	<5,000	0.7	<0.5	<0.5	2
	7/1/91	SAL	8015/8020	730			250	3.0	16	4.8
	9/25/91	SAL	8015/8020	160			68	1.3	6.1	1.3
	12/23/91	SPA	8015/8020	170			70	1.6	3.5	2.4
	3/24/92	SPA	8015/8020	60			39	4.4	3.9	9.1
	6/23/92	SPA	8015/8020	60			19	1.1	1.1	1.0
C-2	3/25/91	SAL	8015/8020	<50	<50	***	1	<0.5	<0.5	2
	7/1/91	SAL	8015/8020	660			190	2.5	28	22
	9/25/91	SAL	8015/8020	110			200	1.9	21	1.7
	12/23/91	SPA	8015/8020	<50			1.2	1.2	<0.5	1.8
	3/24/92	SPA	8015/8020	100			5.9	7.9	4	14
	6/23/92	SPA	8015/8020	190			45	4.5	9.5	10
C-3	3/25/91	SAL	8015/8020	<50	<50		<0.5	<0.5	<0.5	0.5
	7/1/91	SAL	8015/8020	<50			<0.5	< 0.5	< 0.5	< 0.5
	9/25/91	SAL	8015/8020	<50			<0.5	< 0.5	<0.5	<0.5
	12/23/91	SPA	8015/8020	<50		w	1.0	< 0.5	<0.5	1.5
	3/24/92	SPA	8015/8020	<50			<0.5	<0.5	< 0.5	<0.5
	6/23/92	SPA	8015/8020	<50		+	0.9	1.1	0.5	1.6
C-4	3/25/91	SAL	8015/8020	2,700	<50		240	16	<0.5	350
	7/1/91	SAL	8015/8020	7,900			1,500	230	340	350
	9/25/91	SAL	8015/8020	3,200			850	160	150	220
	12/23/91	SPA	8015/8020	4,100			390	52	42	340
	3/24/92*	SPA	8015/8020							
	6/23/92*								***	
Trip Blank	3/25/91	SAL	8015/8020	<50			<0.5	<0.5	<0.5	<0.5
(AA)	7/1/91	SAL	8015/8020	<50			<0.5	< 0.5	< 0.5	<0.5
•	9/25/91	SAL	8015/8020	<50			<0.5	< 0.5	<0.5	<0.5
	12/23/91	SPA	8015/8020	<50			<0.5	<0.5	< 0.5	< 0.5
	3/24/92	SPA	8015/8020	<50			<0.5	<0.5	< 0.5	<0.5
	6/23/92	SPA	8015/8020	<50			<0.5	<0.5	<0.5	<0.5



Table 2. Analytic Results for Ground Water - Chevron Service Station #9-1740, 6550 Moraga Avenue, Oakland, California (continued)

Well ID	Date Sampled	Analytic Lab	Analytic Method	TPPH(G) <	TPH(D)	O&G	B ppb	Т	E	X >
Bailer Blank	3/25/91	SAL	8015/8020	<50			<0.5	<0.5	<0.5	<0.5
(BB)	7/1/91	SAL	8015/8020	<50			<0.5	<0.5	<0.5	<0.5
(DD)	9/25/91	SAL	8015/8020	<50			< 0.5	<0.5	<0.5	< 0.5
	12/23/91	SPA	8015/8020	<50		***	<0.5	<0.5	<0.5	<0.5
	3/24/92	SPA	8015/8020	<50			<0.5	< 0.5	<0.5	<0.5
	6/23/92	SPA	8015/8020	<50			<0.5	<0.5	<0.5	<0.5

EXPLANATION:

TPPH(G) = Total Purgeable Petroleum Hydrocarbons as Gasoline TPH(D) = Total Petroleum Hydrocarbons as Diesel

O&G = Oil and Grease

B = Benzene

T = Toluene

E = Ethylbenzene

X = Xylenes

ppb = Parts per billion

--- = Not analyzed/Not applicable

ANALYTIC METHODS:

8015 = EPA Method 8015/5030 for TPPH(G)

8015 = EPA Method 8015 for TPH(D)

8020 = EPA Method 8020 for BTEX

503E = Standard Methods Method 503E for O&G

ANALYTIC LABORATORIES:

SAL = Superior Analytic Laboratory of Martinez, California

SPA = Superior Precision Analytical, Inc. of Martinez, California

NOTE:

Analytic data prior to July 1, 1991 were compiled from the Soil and Groundwater Investigation Report prepared for this service station by Pacific Environmental Group, Inc. dated June 13, 1991.

Product was measured in this well, therefore it was not sampled.



APPENDIX C SIERRA ENVIRONMENTAL SERVICES STANDARD OPERATING PROCEDURES



SES STANDARD OPERATING PROCEDURE GROUND WATER SAMPLING - QUARTERLY MONITORING

The following describes sampling procedures used by SES field personnel to collect and handle ground water samples. Before samples are collected, careful consideration is given to the type of analysis to be performed so that precautions are taken to prevent loss of volatile components or contamination of the sample, and to preserve the sample for subsequent analysis. Wells will be sampled no less than 24 hours after well development. Collection methods specific to ground water sampling are presented below.

Prior to sampling, each well is checked for the presence of free-phase hydrocarbons using an MMC flexi-dip interface probe. Product thickness (measured to the nearest 0.01 foot) is noted on the sampling form. Water level measurements are also made using either a water level meter or the interface probe. The water level measurements are also noted on the sampling form.

Prior to sampling, each well is purged of a minimum of three well casing volumes of water using a steam-cleaned PVC bailer, or a pre-cleaned pump. Temperature, pH and electrical conductivity are measured during purging. Purging is continued until these parameters have stabilized for consecutive readings.

Ground water samples are collected from the wells with steam-cleaned Teflon batlers. The water samples are decanted into the appropriate container for the analysis to be performed. Prepreserved sample containers may be used or the analytic laboratory may add preservative to the sample upon arrival. Duplicate samples are collected from each well as a back-up sample and/or to provide quality control. The samples are labeled to include the project number, sample ID, date, preservative, and the field person's initials. The samples are placed in polyethylene bags and in an ice chest (maintained at 4°C with blue ice or ice) for transport under chain of custody to the laboratory.

The chain of custody form includes the project number, analysis requested, sample ID, date analysis and the SES field person's name. The form is signed and dated (with the transfer time) by each person who yields or receives the samples beginning with the field personnel and ending with the laboratory personnel.



A trip blank and bailer blank accompanies each sampling set, or 5% trip blanks and 5% bailer blanks are included for sets of greater than 20 samples. The bailer blank is prepared by pouring previously boiled water into a steam-cleaned Teflon bailer prior to sampling a well. The trip and bailer blanks are analyzed for some or all of the same compounds as the ground water samples.

GWS-QMP2.SOP



APPENDIX D CHAIN OF CUSTODY DOCUMENT AND LABORATORY ANALYTIC REPORTS

slinquished By	(Signature)		/ -	SES enizotion		6-23-92 Date/Time		celved B	y (Signa	ature)			Organizat	tion	Date	/Time				48	Hre. Days	
ilinguished By	(Signature)	1(:/	/ 1 1 '	anization	.	Cate/Time	- 1	celyed B	y (Signo	iture)			Organizal	ilon	Date	/Ilme			Turn An			Choice)
		†						1					1.									
	···																					
					-			 	 													
								 					-									
	· · · · · · · · · · · · · · · · · · ·	-			<u> </u>			 				:::en:	1						****			
							<u> </u>	 	<u></u>		VO.	'S W	frout	reads	o ace	= $$						<u> </u>
				<u> </u>				 		: 	Soc	plos	Preser	ved _								<u> </u>
								<u> </u>			App	ipies ropri	Stores ate co	in ice	·	_						
2-2			W	Ψ	1300	V	4						iial:			, R				1		V
2-3					1220		1	1					,									
-1					1145					 												
BB				1	1050			/									\	·				1-1
B-LB		3/40,	W	G	0900	HCL	Ves	7							*						Ano	Lyze
Sample	Lab Sample	Number	Matrix S = Soil W = Wate	adyl C O	Time	Somple Pres	load (Yes	BTEX + TPH GAS (8020 + 8015)	TPH Diesel (8015)	Oil and Grease (5520)	Purgeable (8010)	Purgeable (8020)	Purgadbi (8240)	Extractoble (8270)	CA,Cr,Pb,Zn,Ni (ICAP or AA)						Rei	norka
Number	ole Number	of Containers	A = Air er C = Charcoal	= Grab = Composite = Discrete		reservation	or No)	TPH CAS 8015)	ه	Gredee	Purgeable Halocarbons (8010)	Aromatics	Purgeobie Organics (8240)	ole Organice	Zn.Nî AA)						In li	sted Onle
			pod		-						e/	1,42	Analyse	e To Be	Perform	ied		/			Do Not	- Bill B Sampl
		Pr	oject Co	ntact (No S (P)	one) none)	hriz 10 70 128	<i>(</i>) (Fax	Number	370	79	<u>5 5</u>	16 T.	ollection Ignoture .	2	1	1	20					
X (415)842		*	idress "E	0. 2	546	Marti	nez	_04	94	55	S	- s	amples (ollection	offected	by (Nor	no) 79	tndr 1	en	ZVII	aku	1,12	
.O. BOX 5 in Ramon, CA		Consu	Itant Na	no <u>Sie</u>	cra. E	hvi mh m	ente	1 5	201			_ 1 1/	homton	Release	Numbe	- 4	609	ગ 9	80	•		
nevron U.S.		Consu		y Addr es Ject Num		kland 221-		More I	<u>ج</u> د.	HVL		- ,	aboratory		(Phone)_					12	752 42/4/	20/3
		Chevro		y Numbe		7-174				1	· '	_ c	hevron C	ontact (Nome) _			<u> </u>	unn	ern_	NAK	Recor
								vron											_			



Superior Precision Analytical, Inc.

825 Arnold Drive, Suite 114 • Martinez, California 94553 • (510) 229-1512 / fax (510) 229-1526

Sierra Environmental Project 1-221-0 Attn: Chris Bramer Reported 06/29/9	Sierra Environmental Attn: Chris Bramer		
--	--	--	--

TOTAL PETROLEUM HYDROCARBONS

Lab #	Sample Identification	Sampled	Analyzed Matrix
86052- 1	TB-LB	06/23/92	06/25/92 Water
86052- 2	BB	06/23/92	06/25/92 Water
86052- 3	C-1	06/23/92	06/25/92 Water
86052- 4	C-3	06/23/92	06/25/92 Water
86052- 5	C-2	06/23/92	06/25/92 Water

RESULTS OF ANALYSIS

Laboratory Number:	86052- 1	86052- 2	86052- 3	86052- 4	86052- 5
Gasoline:	ND<50	ND<50	60 *	ND<50	190
Benzene:	ND<0.5	ND<0.5	19	0.9	45
Toluene:	ND<0.5	ND<0.5	1.1	1.1	4.5
Ethyl Benzene:	ND<0.5	ND<0.5	1.1	0.5	9.5
Xylenes:	ND<0.5	ND<0.5	1.0	1.6	10
Concentration:	ug/L	ug/L	ug/L	ug/L	ug/L

CERTIFICATE OF ANALYSIS

ANALYSIS FOR TOTAL PETROLEUM HYDROCARBONS

Page 2 of 2 QA/QC INFORMATION SET: 86052

NA = ANALYSIS NOT REQUESTED
ND = ANALYSIS NOT DETECTED ABOVE QUANTITATION LIMIT
ug/L = parts per billion (ppb)

- * Gasoline range concentration reported. The chromatogram shows only a single peak in the gasoline range.
- OIL AND GREASE ANALYSIS By Standard Methods Method 5520F: Minimum Detection Limit in Water: 5000ug/L
- Modified EPA SW-846 Method 8015 for Extractable Hydrocarbons: Minimum Quantitation Limit for Diesel in Water: 50ug/L
- EPA SW-846 Method 8015/5030 Total Purgable Petroleum Hydrocarbons: Minimum Quantitation Limit for Gasoline in Water: 50ug/L

EPA SW-846 Method 8020/BTXE

Minimum Quantitation Limit in Water: 0.5ug/L

ANALYTE	SPIKE LEVEL	MS/MSD RECOVERY	RPD	CONTROL LIMIT
Gasoline:	200 ng	84/85	2	70-130
Benzene:	200 ng	91/90	2	70-130
Toluene:	200 ng	92/92	1	70-130
Ethyl Benzene:	200 ng	97/97	0	70-130
Xylenes:	200 ng	84/83	1	70-130

Richard Srna, Ph.D.

Illomina V. Janquilia (for) Laboratory Director

Certified Laboratories