



July 15, 1994

Chevron U.S.A. Products Company 2410 Camino Ramon San Ramon, CA 94583 P.O. Box 5004 San Ramon, CA 94583-0804

Marketing Department Phone 510 842 9500

Ms. Juliet Shin Alameda County Health Care Services Department of Environmental Health 1131 Harbor Bay Parkway, Suite 250 Alameda, CA 94501

Re: Former Chevron Service Station #9-1153 3126 Fernside Boulevard, Alameda, CA

Dear Ms. Shin:

Enclosed is the quarterly Groundwater Monitoring and Sampling Activities report dated May 13, 1994, prepared by our consultant Groundwater Technology, Inc. for the above referenced site. As indicated in the report, ground water samples collected were analyzed for total petroleum hydrocarbons as gasoline (TPH-G) and BTEX. Benzene was detected in monitor wells C-1, MW-5, and MW-7 at concentrations of 12000, 170, and 630 ppb, respectively. Depth to ground water was measured at approximately 2.3 feet to 4.6 feet below grade and the direction of flow is to the east.

We have received your letter dated June 23, 1994, requesting additional investigation and remediation work at the site. As we discussed in our telephone conversation of July 1, 1994, our consultant Weiss Associates is currently preparing a comprehensive site review document which will call out appropriate future actions for this site. We anticipate submitting this document to your office within the 90 day time frame requested.

We will continue to monitor and sample all wells at this site on a quarterly basis in conjunction with operating the ground water extraction system.

If you have any questions or comments, please do not hesitate to contact me at (510) 842-8134.

Sincerely,

CHEVRON U.S.A. PRODUCTS COMPANY

Mark A. Miller

Site Assessment and Remediation Engineer

Enclosure

cc: Mr. Kevin Graves, RWQCB - Bay Area

Mr. Mike Cooke - Weiss Associates

Mr. Eric Anderson - Weiss Associates

Ms. B.C. Owen





4057 Port Chicago Highway, Concord, CA 94520 (415) 671-2387

FAX: (415) 685-9148

May 13, 1994

Project No. 020104100

Mr. Mark Miller Chevron U.S.A. Products Company 2410 Camino Ramon San Ramon, CA 94583-0804

SUBJECT:

Groundwater Monitoring and Sampling Activities

Chevron Service Station No. 9-1153

3126 Fernside Boulevard, Alameda, California

Dear Mr. Miller:

Groundwater Technology, Inc. presents the quarterly groundwater monitoring and sampling data collected on April 7, 1994. The six groundwater monitoring wells at the site were gauged to measure depth to groundwater (DTW) and to check for the presence of separate-phase hydrocarbons. Separate-phase hydrocarbons were not detected in the monitoring wells. A potentiometric surface map and a summary of groundwater monitoring data are presented in Attachments 1 and 2, respectively. After the DTW was measured, each monitoring well was purged and sampled. Groundwater monitoring and sample collection protocol and field data sheets are presented in Attachment 3. The groundwater samples collected were analyzed for benzene, toluene, ethylbenzene, and xylenes and for total petroleum hydrocarbons-as-gasoline. Results of the chemical analyses are summarized in Table 1. The laboratory report and chain-of-custody record are included in Attachment 4. Monitoring-well purge water was transported by Groundwater Technology to the Chevron Terminal in Richmond, California, for recycling.

Groundwater Technology is pleased to assist Chevron on this project. If you have any questions or comments, please contact our Concord office at (510) 671-2387.

Sincerely,

Groundwater Technology, Inc.

Written/Submitted by

Tim Watchers

Project Manager

PR KS

Attachment 1

Figure

Attachment 2

Table

Attachment 3

Protocol and Field Data Sheets

Attachment 4

Laboratory Report

For:


Wendell W. Lattz

Vice President, General Manager

West Region

4100gmsr.294

Figure

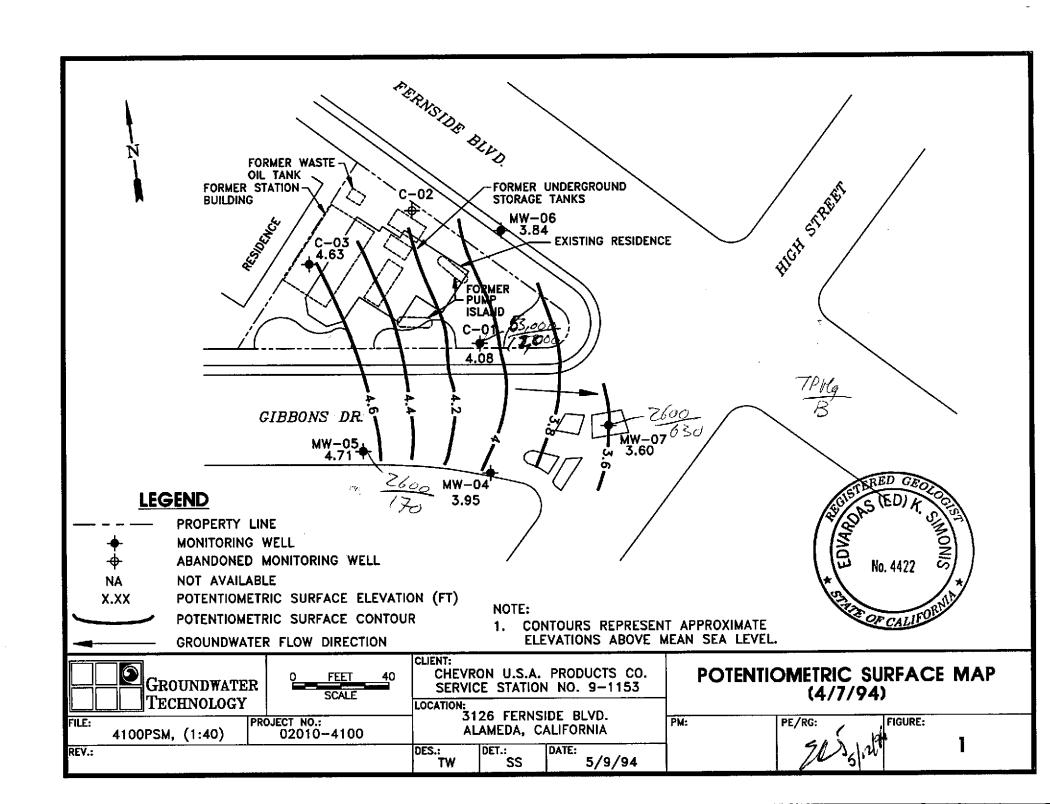

Table

# TABLE 1 HISTORICAL GROUNDWATER MONITORING AND ANALYTICAL RESULTS Chevron Service Station No. 9-1153 3126 Femside Boulevard, Alameda, California

Well ID/ Elev	Date	TPH-G	Benzene	Toluene	Ethyl- benzene	Xylenes	DTW (ft)	SPT (ft)	WTE (ft)
C-1	08/18/86						4.10		
• ,	09/04/86	15,000	760	820	1,500 <sup>1</sup>	1			
	07/22/87	1,100	250	7	40 <sup>1</sup>	1			
	05/03/89	6,900	3,800	190	2291	1	4.46		
	12/04/89	17,000	8,000	490	470¹	1	4.16		
	02/14/90	19,000	12,000	990	1,050 <sup>1</sup>	1	3.64		
	03/07/90		4,260	261	430 <sup>1</sup>	1	3.36		
	09/06/91	21,000	10,000	100	240	560	4.43	$0.00^{2}$	
	12/15/91	20,000	4,900	43	110	330	4.78	$0.00^{2}$	
	03/03/92	13,000	5,800	730	340	1,200	2.39	$0.00^{2}$	
4.08	06/04/92	34,000	9,400	350	290	1,200	4.08	0.00	0.00
1.40	10/13/92	24,000	11,000	98	280	530	4.75	0.00	-0.67
	01/11/93	7,100	1,500	130	150	700	2.26	Sheen	1.82
	04/14/93	29,000	7,300	4,000	640	2,300	2.90	Sheen	1.18
	07/13/93	650,000	27,000	18,000	6,300	29,000	3.97	Sheen	0.11
	10/19/93	40,000	12,000	730	1,100	3,600	4.50	0.00	-0.42
7.50	11/30/93	,	·				4.27	0.00	3.23
,	01/27/94	36,000	8,600	220	670	1,900	3,35	0.00	4.15
	04/07/94	53,000	12,000	3,500	480	3,300	3.42	0.00	4.08
C-2	08/18/86						,		
	09/04/86	1,100	49	18	84 <sup>1</sup>	1			
	07/22/87	<50	1.8	<1.0	<4.0 <sup>1</sup>	1			
	05/03/89	Abandoned							

GROUNDWATER
TECHNOLOGY \*

## TABLE 1 HISTORICAL GROUNDWATER MONITORING AND ANALYTICAL RESULTS Chevron Service Station No. 9-1153 3126 Fernside Boulevard, Alameda, California

Well ID/ Elev	Date	ТРН-G	Benzene	Toluene	Ethyl- benzene	Xylenes	DTW (ft)	SPT (ft)	WTE (ft)
C-3	08/18/86			***			4.00		
0-5	09/04/86	50	3.2	5.4	5.8 <sup>1</sup>	1			
	07/22/87	<50	<0.5	<1.0	<4.0 <sup>1</sup>	1			
	05/03/89	<50	<0.5	<1.0	<2.0 <sup>1</sup>	1	4.15		
	12/04/89	<250	<0.5	<0.5	<0.5 <sup>1</sup>	1	4.24		
	02/14/90	<50	<0.5	<0,5	<0.5 <sup>1</sup>	1	3.57		
	03/07/90	NA	<5	<5	<5 <sup>1</sup>	1	3.31		
	09/06/91	<50	<0.5	<0.5	<0.5	<0.5	4.59	$0.00^{2}$	
	12/15/91	<50	<0.5	< 0.5	<0.5	<0.5	4.84	$0.00^{2}$	
	03/03/92	<50	<0.5	<0.5	<0.5	<0.5	2.17	$0.00^{2}$	
4.41	06/04/92	<50	<0.5	<0.5	<0.5	<0.5	4.01	0.00	0.40
	10/13/92	<50	<0.5	< 0.5	<0.5	<0.5	4,79	0.00	-0.38
	01/11/93	<50	<0.5	<0.5	<0.5	<0.5	2.01	0.00	2.40
	04/14/93	<50	<0.5	<0.5	<0.5	<0.5	2.76	0.00	1,65
	07/13/93	<50	<0.5	<0.5	<0.5	<1.5	3.96	0.00	0,45
	10/19/93	66	12	1.4	1.0	8.4	4,53	0.00	-0.12
7.83	11/30/93	•					4.04	0.00	3.79
	01/27/94	<50	<0.5	<0.5	<0.5	<0.5	3.17	0.00	4.66
	04/07/94	<50	<0.5	<0.5	<0.5	<0.5	3.20	0.00	4,63
MW-4	06/04/92	<50	0.8	<0.5	<0.5	<0.5	3.63	0.00	-0.05
3.58	10/13/92								
	01/11/93	<50	<0.5	<0.5	<0.5	<0.5	1.89	0.00	1.69
	04/14/93	<50	<0.5	<0.5	<0.5	<1.5	2.20	0.00	1.38
	07/13/93	54	2.6	1.6	<0.5	<1.5	3,51	0.00	0.07
	10/19/93	<50	<0.5	<0.5	<0.5	<0.5	4.22	0.00	-0.64
7.01	11/30/93						4.01	0.00	3.00
-	01/27/94	<50	<0.5	<0.5	<0.5	<0.5	2.89	0.00	4.12
	04/07/94	<50	<0.5	<0.5	<0.5	<0.5	3.06	0.00	3.95

GROUNDWATER
TECHNOLOGY \*

## TABLE 1 HISTORICAL GROUNDWATER MONITORING AND ANALYTICAL RESULTS Chevron Service Station No. 9-1153 3126 Fernside Boulevard, Alameda, California

Well ID/ Elev	Date	TPH-G	Benzene	Toluene	Ethyl- benzene	Xylenes	DTW (ft)	SPT (ft)	WTE (ft)
MW-5	06/04/92	560	110	0.5	37	2.2	3.25	0.00	0,36
3,61	10/13/92	1,200	150	<2.5	84	8,6	4.20	0.00	-0.59
5,5 .	01/11/93	1,300	48	1.0	83	33	1.30	0.00	2,31
	04/14/93	2,600	240	6.1	250	170	1.20	0.00	2.41
	07/13/93	1,700	260	7.8	160	100	3.15	0.00	0.46
	10/19/93	1,900	190	3.3	200	93	3.82	0.00	-0.21
	11/30/94						3.56	0.00	3,48
	01/27/94	4,000	100	12	210	110	2.42	0.00	4.62
	04/07/94	2,600	170	10	150	88	2.33	0.00	4.71
MW-6	06/04/92	210	54	<0.5	1.9	2.4	3.89	0.00	-0.04
3.85	10/13/92	*10,000	5,300	<10	70	<10	4.56	0.00	-0.71
0.00	01/11/93	100	50	<0.5	<0.5	<0.5	2.36	0.00	1.49
	04/14/93	<50	<0.5	<0.5	<0.5	<0.5	3.15	0.00	0.70
	07/13/93	<50	1.8	<0.5	<0.5	<1.5	3.94	0.00	-0.09
	10/19/93	320	150	<0.5	0.8	0.5	4.40	0.00	-0,55
	11/30/94						4.16	0.00	3.11
	01/27/94	120	45	<0.5	<0.5	<0.5	3.33	0.00	3.94
1	04/07/94	<50	<0.5	<0.5	<0.5	<0.5	3.43	0.00	3.84

GROUNDWATER TECHNOLOGY \*

### TABLE 1 HISTORICAL GROUNDWATER MONITORING AND ANALYTICAL RESULTS Chevron Service Station No. 9-1153 3126 Fernside Boulevard, Alameda, California

Well ID/ Elev	Date	трн-G	Benzene	Toluene	Ethyl- benzene	Xylenes	DTW (ft)	SPT (ft)	WTE (ft)
MW-7 8.22	11/30/93 01/27/94 04/07/94	480 120 2,600	110 21 630	41 1.1 39	4.4 2.2 56	38 4.8 94	5.33 4.50 4.62	0.00 0.00 0.00	2.89 3.72 3.60
TMW-1	11/11/93	<1	<0.5	<0.5	<0.5	<0.5		0.00	
TBLB	02/14/90 09/06/91 12/15/91 03/03/92 06/04/92 10/13/92 01/11/93 04/14/93 07/13/93 10/19/94 04/07/94	<50 <50 <50 <50 <50 <50 <50 <50 <50	<0.5 <0.5 <0.5 <0.5 <0.5 <0.5 <0.5 <0.5	1.1 <0.5 <0.5 <0.5 <0.5 <0.5 <0.5 <0.5 <0.5	<0.5 <0.5 <0.5 <0.5 <0.5 <0.5 <0.5 <0.5	<0.5 <0.5 <0.5 <0.5 <0.5 <0.5 <0.5 <1.5 <0.5 <1.5 <0.5 <0.5 <1.5 <0.5 <0.5			

TPH-G = Total petroleum hydrocarbons-as-gasoline

DTW = Depth to water

SPT = Separate-phase hydrocarbon thickness

WTE = Groundwater elevation in feet above mean sea level

--- = Not applicable/not sampled/not measured

\* Gasoline range concentration reported. The chromatogram shows only a single peak in the gasoline range.

Ethylbenzene and xylenes were reported together.

Product thickness was measured with an MMC flexi-dip interface probe.

Before June 4, 1992, the top-of-casing elevations were unknown. Analytical results are in micrograms per liter or parts per billion.



Groundwater Monitoring and Sample Collection Protocol and Field Data Sheets

### GROUNDWATER TECHNOLOGY GROUNDWATER MONITORING AND SAMPLE COLLECTION PROTOCOL

#### **Groundwater Monitoring**

Groundwater monitoring is accomplished using a INTERFACE PROBE" Well Monitoring System. The INTERFACE PROBE" Well Monitoring System is a hand held, battery operated device for measuring the depth to separate-phase hydrocarbons and depth to water. The INTERFACE PROBE" Well Monitoring System consists of a dual-sensing probe which utilizes an optical liquid sensor and electrical conductivity to distinguish between water and petroleum products.

Monitoring is accomplished by measuring from the surveyed top of well casing or grade to groundwater and separate-phase hydrocarbons if present. The static water elevation is then calculated for each well and a potentiometric surface map is constructed. If separate-phase hydrocarbons are detected the water elevation is adjusted by the following calculation:

(Product thickness) x (0.8) + (Water elevation) = Corrected water elevation

Groundwater monitoring wells are monitored in order of wells with lowest concentrations of volatile organic compounds to wells with the highest concentrations, based upon historical concentrations. If separate-phase hydrocarbons are encountered in a well, the product is visually inspected to confirm and note color, amount, and viscosity. Monitoring equipment is washed with laboratory grade detergent and rinsed with distilled or deionized water before monitoring each well.

#### **Groundwater Sampling**

Before groundwater samples are collected, sufficient water is purged from each well to ensure representative formation water is entering the well. Wells are purged and sampled in the same order as monitoring, from wells with the lowest concentrations of volatile organic compounds to wells with the highest concentrations. Wells are purged using either a polyvinyl chloride (PVC) bailer fitted with a check valve or with a stainless steel submersible Grundfos pump. The purge equipment is decontaminated before use in each well by washing with laboratory grade detergent and tripled rinsing with delonized or distilled water. A minimum of 3 well-casing volumes of water are removed from each well while pH, electrical conductivity, and temperature are recorded to verify that "fresh" formation water is being sampled and the parameters have stabilized. If the well is low yielding, it may be purged dry and sampled before 3 casing volumes are purged. The wells are then allowed to recharge to approximately 80 percent of the initial water level before a sample is collected.

Groundwater samples are collected from each well using a new, prepackaged disposable bailer and string. The water sample is decanted from the bailer into laboratory-provided containers (appropriate for the analyses required) so that there is no headspace in the containers. Samples collected for benzene, toluene, ethylbenzene, xylene, and total petroleum hydrocarbons (TPH)-as-gasoline analyses are collected in 40-milliliter vials fitted with Teflon® septum lids. Samples are preserved with hydrochloric acid (HCL) to a pH of less than 2. Dissolved metals samples are filtered through a 0.45-micron paper filter in the field and preserved as required before submitting to the laboratory for analyses. All samples are labeled immediately upon collection and logged on the chain-of-custody record. Sample label and chain-of-custody recorded information includes the project name and number, sample identification, date and time of collection, analyses requested, and the sampler's name. Sample bottles are placed in plastic bags (to protect the bottles and labels) and on ice (frozen water) in an insulated cooler and are shipped under chain-of-custody protocol to the laboratory.

The chain-of-custody record documents who has possession of the samples until the analyses is performed. Other pertinent information is also noted for the laboratory use on the chain-of-custody record.

Trip blanks (TBLBs) are used for each project as a quality assurance/quality control measure. The TBLBs are prepared by the laboratory and are placed in the insulated cooler and accompany the field samples throughout the sampling event.

Site Address:	Project Name: <u>Chevron - Fernside</u> Site Address: <u>3126 Fernside Ave, Oakland</u> Project Number: <u>020104100.0610</u>			Date: 1/7/9 4  Page of  Project Manager: Tim Watchers					
Well ID: Well Diameter:	3		Initia	DTW Measurements:  Initial: 3.20 Calc Well Volume: gal  Recharge: Well Volume: gal					
Gear Drive	Pump Hand Air Lif Other			Hydac:	s Used (	Other:			
Time	Temp  C E	Conductivity	ÿ pH	Purge Volume Gallons	Turbidity	Comments			
09:04	14.2	.48	6.84	2	Grey				
09:07	14.2	3	1.03	5	,				
09:09	14.5	.56	7.04	10					
C9:11	14.8	25	7.02	21		DRY at			
						15 991			

•	4/-/nu							
Project Name:	Chevron - Fer	<u>nside</u>		Da	ite:	97		
Site Address:	3126 Fernside	Ave, Oakland		Pa	gec	of 6		
Project Number	r: <u>02010</u>	4100.0610		Pr	oject Manager:	Tim Watchers		
Well ID: Well Diameter:	• /	7	n nac	DTW Measurements: Initial: 1.62 Calc Well Volume:gal Recharge: Well Volume:gal				
Peristaltic Gear Drive	Pump Hand Air Lif Other	BailedXt		YSI:				
Time	Temp X C F	Conductivity	∛ pH	Purge Volume Gallons	Turbidity	Comments		
09:31	17,4	181	7.01	2	Tan			
09:33	17.5	.79	7.02	3	6ry			
09:35	17.5	.77	7.05	Ч				
09:38	17.5	.74	7.12	6	V			

Project Name: Chevron - Fernside Site Address: 3126 Fernside Ave, Oakland Project Manager: \_\_\_\_Tim Watchers\_\_\_\_ Project Number: 020104100.0610 MM-A Well ID: DTW Measurements: 3.06 Calc Well Volume: gal Initial: Well Diameter: \_\_\_\_ Well Volume: gal Recharge:\_\_\_ Pump Depth\_ Instruments Used Purge Method Other:\_\_\_\_\_ Hand Bailed\_ YSI: Peristaltic\_\_\_\_\_ \_\_ Air Lift\_ Hydac: Gear Drive\_\_\_\_\_ Omega:\_ Other\_\_\_ Submersible\_\_\_\_\_ Purge Turbidity Comments Conductivity pН Volume Time Gallons 6.78 09:51 NpT 1.21 2 09:59 10:02 10:04 1,21

Project Name: <u>Chevron - Fernside</u> Site Address: <u>3126 Fernside Ave, Oakland</u> Project Number: <u>020104100.0610</u>				Pa	gec gec				
Well ID: Well Diameter:	MW-2	<u> </u>		DTW Measurements: Initial: 3.43					
		Depth BailedXt		Hydac:	s Used	_			
Time	Temp C F	Conductivity	₹ pH	Purge Volume Gallonş	Turbidity	Comments			
10:34	17.4	.58	6.61	7	Tan				
10:36	17.4	.63	6.65	3	Ì				
10:3-8	17.4	.66	6.72	4					
וסיאס	17.5	۰7۱	685	6	\ 				
					-				

Site Address: Project Number	7. Initial: 2.37 Calc Well Volume: gal										
Purge Method Peristaltic Gear Drive			ft.	Instruments YSI:		Other:					
Time	Jemp C F	Conductivity	.3 рН	Purge Volume Gallons	Turbidity	Comments					
11:16	17.9	,61	6.72	2	Tan						
11:17	17.7	.67	6.72	3		·					
11:19	17.7	.62	6.72	5							
11:21	17.6	,62	6.70	7	\ 						
					2						

Project Name: Chevron - Fernside Site Address: 3126 Fernside Ave, Oakland Project Manager: \_\_\_\_Tim Watchers \_\_\_\_ Project Number: 020104100.0610 DTW Measurements: Calc Well Volume: 20 gal Well ID: 3.42 Initial: Well Diameter: \_\_\_\_3 Well Volume: gal Recharge:\_\_\_\_\_ Purge Method
Peristaltic Hand Bailed X Instruments Used Other:\_\_\_\_\_ YSI: X Hydac: \_ Gear Drive\_\_\_\_\_ Air Lift\_\_\_\_\_ Submersible\_\_\_\_ Other\_\_\_\_ Omega:\_\_ Purge Comments Volume Turbidity Conductivity | pH Time Gallons MAT 17.8 .81 6.88 11:51 1.02 6.95 11:55 17,6 1.03 696 11:59 DRY 20

**Laboratory Report** 



### Superior Precision Analytical, Inc.

825 Arnold Drive, Suite 114 • Martinez, California 94553 • (510) 229-1512 / fax (510) 229-1526

GROUNDWATER TECHNOLOGY, INC.

Project 9-1153 Reported 04/14/94

Attn: TIM WATCHERS

#### TOTAL PETROLEUM HYDROCARBONS

Lab #	Sample Identification	Sampled	Analyzed Matrix
30410- 1	TB-LB	04/07/94	04/12/94 Water
30410- 2	C-3	04/07/94	04/12/94 Water
30410- 3	MW - 7	04/07/94	04/13/94 Water
30410- 4	MW - 4	04/07/94	04/12/94 Water
30410- 5	MW-6	04/07/94	04/12/94 Water
30410- 6	MW-5	04/07/94	04/13/94 Water
30410- 7	C-1	04/07/94	04/13/94 Water

#### RESULTS OF ANALYSIS

Laboratory Number:	30410- 1	30410- 2	30410- 3	30410- 4	30410- 5
--------------------	----------	----------	----------	----------	----------

Gasoline:	ND<50	ND<50	2600	ND<50	ND<50
Benzene:	ND<0.5	ND<0.5	630	ND<0.5	ND<0.5
Toluene:	ND<0.5	ND<0.5	39	ND<0.5	ND<0.5
Ethyl Benzene:	ND<0.5	ND<0.5	56	ND<0.5	ND < 0.5
Total Xylenes:	ND<0.5	ND<0.5	94	ND<0.5	ND<0.5
Concentration:	ug/L	ug/L	ug/L	ug/L	ug/L

Laboratory Number: 30410-6 30410-7

Gasoline:	2600	53000
Benzene:	170	12000
Toluene:	10	3500
Ethyl Benzene:	150	480
Total Xylenes:	88	3300
Concentration:	ug/L	ua/L

Page 1 of 2 Certified Laboratories

#### CERTIFICATE OF ANALYSIS

#### ANALYSIS FOR TOTAL PETROLEUM HYDROCARBONS

Page 2 of 2 QA/QC INFORMATION SET: 30410

NA = ANALYSIS NOT REQUESTED

ND = ANALYSIS NOT DETECTED ABOVE QUANTITATION LIMIT

ug/L = parts per billion (ppb)

OIL AND GREASE ANALYSIS By Standard Methods Method 5520F: Minimum Detection Limit in Water: 5000ug/L

Modified EPA SW-846 Method 8015 for Extractable Hydrocarbons:
Minimum Quantitation Limit for Diesel in Water: 50uq/L

EPA SW-846 Method 8015/5030 Total Purgable Petroleum Hydrocarbons: Minimum Quantitation Limit for Gasoline in Water: 50ug/L

EPA SW-846 Method 8020/BTXE

Minimum Quantitation Limit in Water: 0.5ug/L

ANALYTE	MS/MSD RECOVERY	RPD	CONTROL LIMIT
Gasoline:	129/129	 0%	70-130
Benzene:	93/84	10%	70-130
Toluene:	94/87	8%	70-130
Ethyl Benzene:	84/79	6%	70-130
Total Xylenes:	99/87	13%	70-130

Senior Chemist

Certified Laboratories

□ Ýes Fax copy of Lab Report and COC to Chevron Contact: No Chain-of-Custody-Record Chevron Foolity Number 9-1153
Foolity Address 3126 FCRNSIDE Mark Miller Chevron Contact (Name) ... & OAKLAND (Plione) (510) 842-8134 Chevron U.S.A. Inc. Consultant Project Number 20104100 Laboratory Name SUPFRIDE P.O. BOX 5004 Consultant Home Groundwater Technology Toc. Laboratory Release Humber 590-1420 San Ramon, CA 94583 Maron 4057 Port Chicago Hwy, Concord, CA. 94520 Samples Collected by (Name) 6 [69] FAX (415)842-9591 MASCU Project Contact (Name) Tim Watchers Collection Date 4/7/94 (Phone)510-671-2387 (Fox Number) Slanature NOTE: Analyses To Be Performed DO NOT BILL Purpeable Holocarbons (8010) Purgeoble Aromotica (8020) 8020 + 8015) TB-LB SAMPLES TPH Diesed (8015) Oil and Grease (5520) 111 ဖပ္ ဝ Remorks TBLB D 4<1 MM C-3 12:20 MW-7 12.30 BTEXTEH 6 5 DAYT MW-4 3 1240 MW-6 ی 12,50 MW-5 CONTOCT TIM WATE 13:00 C - 1 13:10 Please initials Samples Stored in ite. Appropriate containors Ale without handspix Camments: Relinquistred By (Signature) Organization Date/Time Received By (Signature) Organization... Date/11me Turn Around Time (Circle Choice) 4/8 24 Hre. Relinquished, By (Signature) Received By (Stonghure) Dole/Time 4-8594 Organization Organization figla/filme 48 Hre.  $\mathcal{E}^{T_{\lambda}}$ MW-6 (5 Days) Dote/11me 17:19 10 Doys Ogganization Realeved For Laboratory By (Signature) 15-14/Time \$2230 As Contracted Heno make Hate chrosa.