

WORK PLAN  
MONITORING WELL INSTALLATION  
AND QUARTERLY GROUNDWATER MONITORING  
ALAMEDA HISTORICAL HIGH SCHOOL  
2200 CENTRAL AVENUE  
ALAMEDA, CALIFORNIA

June 1, 1992


Prepared for:

Mr. Donald Diel  
Alameda Unified School District  
2200 Central Avenue  
Alameda, California 94501

Prepared by:


  
Misty C. Kaltreider  
Geologist


Reviewed by:

  
Susan Bayne Churchill, REA, #668  
Principal



Reviewed by:

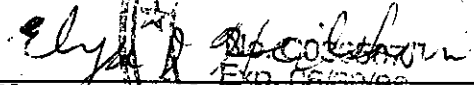  
Elyse D. Henshorn, PE, #36567  
Environmental Engineer

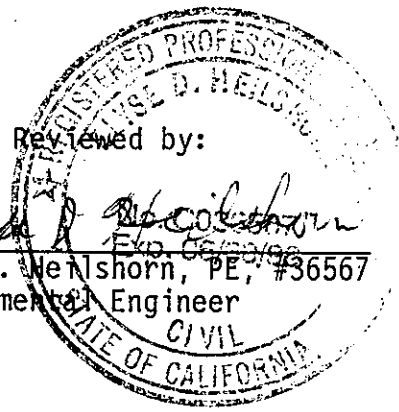

## TABLE OF CONTENTS

	Page
1.0 Introduction.....	1
2.0 Background.....	1
3.0 Scope of Work.....	1
4.0 Monitoring Well Drilling and Installation.....	2
4.1 Groundwater Monitoring.....	3
5.0 Health and Safety Plan.....	3
6.0 Technical Reports.....	3

### FIGURES

Figure 1: Vicinity Map  
Figure 2: Site Plan

### APPENDICES

Appendix A: Soil Sampling in Boreholes and During Construction  
of Monitoring Wells

Appendix B: Well Construction

Appendix C: Water Sampling in Wells and Boreholes

Appendix D: Site Specific Health and Safety Plan

**WORK PLAN  
ALAMEDA HISTORICAL HIGH SCHOOL**

**1.0 Introduction**

ACC Environmental Consultants, Inc. ("ACC") is pleased to present this work plan to the Alameda Unified School District ("District"), regarding the soil and groundwater investigation at the Alameda Historical High School (the "site"), located at 2200 Central Avenue in Alameda, California (Figure 1). The object of this project is to drill four borings within the vicinity of the previously existing underground heating oil tanks. Three of the borings will be converted to groundwater monitoring wells to investigate the existence of groundwater contamination and select the appropriate corrective action for the site.

**2.0 Background**

In December of 1991, Semco of San Mateo removed one 4000-gallon and one 2000-gallon heating oil tank from Alameda Historical High School. During excavation, it was discovered that the tanks were stacked on top of each other. Analysis of soil samples taken from the stockpiled excavated soil indicated up to 25 parts per million of Total Extractable Hydrocarbons as diesel (TPH-d). Soil samples collected from 11 feet within the excavation revealed non-detectable levels of TPH-d, benzene, toluene, ethylbenzene and total xylenes. A sample of the groundwater found within the excavation was collected and analyzed. Results indicated the groundwater contained 0.6 parts per billion (ppb) of toluene, 1.2 ppb ethylbenzene and 1.8 ppb total xylenes.

On February 12, 1992, ACC responded to the Alameda School District when water from recent rains was discovered in the boiler room. Oily water flooded the boiler room (a subterranean building) through cracks between the concrete floor slab and the foundation support beams. Sample analysis of this water indicated elevated levels of oil and grease. As a result, the water was contained into a temporary holding tank.

The origin of the oily water is speculated to be from the previously existing heating oil tanks or the heating oil lines that are still present around the boiler room.

**3.0 SCOPE OF WORK**

ACC will drill four borings at the site. One boring will be located within the previous tank excavation. The other three borings will be converted into 2-inch diameter groundwater monitoring wells. At least one of these wells will be located within 10 feet of the previous tanks. Figure 2 shows the proposed well locations on-site. The total depth of the wells will be contingent upon the lithology encountered during drilling operations, however, it is estimated that the total depth of the wells will be approximately 15 feet below ground surface.

During drilling, undisturbed soil samples will be obtained for chemical analysis and geotechnical classification at five-foot intervals, distinct lithologic changes and at the soil/groundwater interface, beginning at five feet below grade to the bottom of the boring (see Appendix A, "Soil Sampling in Boreholes and During Construction of Monitoring Wells"). Should a review of lithologic logs from nearby wells indicate there is a potential for encountering a shallow aquiclude greater than three feet in thickness, then soil samples will be collected at one and a half foot intervals starting at a depth that is three feet above the expected depth of the top of the aquiclude.

These samples will be submitted to a CAL-EPA certified accredited analytical testing laboratory for analysis of Total Extractable Hydrocarbons such as diesel, kerosene, and heating oil using EPA Modified Test Method 8015 and benzene, toluene, ethylbenzene and total xylenes (BTEX) by EPA Test Method 8020. The well installations will be conducted in a manner consistent with Regional Water Quality Control Board requirements (see Appendix B, Well Construction).

#### **4.0 MONITORING WELL DRILLING AND INSTALLATION**

Drilling permits will be obtained from the Alameda County Water Conservation and Flood Control District - Zone 7 at least five days prior to drilling and sampling activities. The locations of the proposed borings will be marked with white paint. The District, Alameda County Health Department-Environmental Health Division and Underground Service Alert (USA) will be notified at least 48 hours prior to commencing work.

Four borings will be drilled to a depth of 15 feet below ground surface with a hollow stem auger. One of the borings will be placed within the former underground storage tank location. The other three borings will be within 100 feet of the former underground storage tank location and converted into groundwater monitoring wells. At least one of the monitoring wells will be located within 10 feet of the previous excavation.

Soil samples will be collected from each boring, continuously from five feet below grade to the bottom of each boring. If a review of lithologic logs for nearby wells indicates that an aquiclude greater than three feet in thickness exists within the anticipated drilling interval, then, starting at a depth three feet above the projected depth of the top of the aquiclude, continuous samples will be collected in one and a half foot intervals.

Three soil samples, from depths of 5, 10 and 15 feet below ground surface, will be collected from each boring and submitted for laboratory analysis of Total Extractable Hydrocarbons such as diesel, kerosene, and heating oil using EPA Modified Test Method 8015 and benzene, toluene, ethylbenzene and total xylenes (BTEX) by EPA Test Method 8020. Soil cuttings produced during drilling will be placed in 55-gallon capped drums, labeled and left on-site pending the analytical results.

The specifics of the construction and development of the monitoring wells are discussed in detail in Appendix B, "Well Construction". Per Alameda County's Monitoring Well Guidelines, the wells will not be developed until at least 72 hours have elapsed after completion of construction. After development of each well, water samples will be collected and analyzed for Total Extractable Hydrocarbons such as diesel, kerosene, and heating oil using EPA Modified Test Method 8015 and benzene, toluene, ethylbenzene and total xylenes (BTEX) by EPA Test Method 8020 (see Appendix C, Water Sampling in Wells and Boreholes). Additionally, as specified in Alameda County regulations, the wells will not be sampled until at least 72 hours have elapsed following completion of well development. All purge water generated during the sampling process will be contained on site in DOT-approved 55-gallon drums. Disposal of this purge water will be governed by the laboratory results for the associated water sample.

In the event that groundwater gradient measured from the newly installed wells has been determined to flow differently than what is expected, one additional monitoring well will be installed in the verified down-gradient location. Should this occur, an amended work plan will be submitted to the Alameda County Environmental Health Department.

#### Groundwater Monitoring

Following the initial sampling event, ACC will sample the monitoring wells at the site on a quarterly basis for three additional quarters. This will generate one full year of groundwater monitoring data for the site. Prior to each sampling event, the water level elevation in the wells will be measured. ACC will collect, store, and transport the water samples in accordance with existing regulatory guidelines (see Appendix C, "Water Sampling in Wells and Boreholes"). The groundwater samples collected during each quarterly monitoring event will be analyzed for Total Extractable Hydrocarbons such as diesel, kerosene, and heating oil using EPA Modified Test Method 8015 and benzene, toluene, ethylbenzene and total xylenes (BTEX) by EPA Test Method 8020 at a CAL-EPA certified analytical laboratory. A report containing the analytical results will be submitted to Alameda County Environmental Health and the Regional Water Quality Control Board on a quarterly basis. The quarterly report will also include a map showing the groundwater gradient and the extent of any contamination, if present.

#### **5.0 HEALTH AND SAFETY PLAN**

A site health and safety plan which encompasses the proposed work at the site and complies with the requirements of 29 CFR Part 1910.120 is presented in Appendix D.

## 6.0 TECHNICAL REPORTS

A technical report discussing the monitoring well installation and the initial groundwater sampling event at the site will be submitted to the Alameda County Environmental Health Department and the Regional Water Quality Control Board shortly after completion of the initial sampling event. Additional reports detailing groundwater monitoring activities and results will be submitted on a quarterly basis for a period of one year.

**APPENDIX A**

**SOIL SAMPLING IN BOREHOLES AND DURING CONSTRUCTION OF  
MONITORING WELLS**

## **SOIL SAMPLING IN BOREHOLES AND DURING CONSTRUCTION OF MONITORING WELLS**

U.S. Environmental Protection Agency standards serve as the foundation for all field sampling operations performed by ACC. EPA SW 846 is the primary publication from which procedures are derived. While some aspects of field and laboratory work may be delegated to the California Department of Health Services, the California Water Resources Control Board, the Bay Area Regional Water Quality Control Board, and the Department of Environmental Health establish the general and specific criteria for sampling.

### **SAMPLE INTERVALS**

Undisturbed soil samples will be obtained for chemical analysis and geotechnical classification at five-foot intervals or at distinct lithologic changes, beginning at five feet below grade.

### **COLLECTION DEVICES**

Samples will be collected using a 2-inch or 2.5-inch inside diameter Modified California Split Spoon Sampler containing three, six-inch-long brass tubes. The sample collection device and tubes will be decontaminated before and after each use by steam cleaning or by an Alconox solution wash. The sampler will be driven ahead of the auger using a 140-pound drop hammer. The average blow counts required to drive the sampler the last 12 inches will be recorded on the boring logs.

### **PRESERVATION AND HANDLING**

After collection, sample tubes will be labeled, sealed at each end with Teflon sheeting and PVC end caps, placed in ziplock bags and stored in an ice filled cooler to be delivered under chain-of-custody to a State-certified laboratory later that same day.

### **SOILS CLASSIFICATION**

Soil exposed at the ends of each brass tube will be examined by a geologist for obvious signs of contamination and classified according to the Unified Soil Classification System. These observations will be recorded in the boring logs.

Selection of samples for laboratory analysis will be based primarily on headspace readings using a Photo ionization device (PID) and position within the boring. In general, samples with headspace readings over 50 ppm or that have visual or olfactory indications of contamination will be submitted for analysis. One sample will also be selected from one or two sampling intervals below the apparent lower limit of contamination to obtain a "zero line" value. In addition, the sample closest to the depth of the storage tank invert will be submitted for analysis. If the water table is above the tank invert, the sample closest to the water table will be selected.



**SAMPLE LABELING AND CHAIN OF CUSTODY**

Samples selected for analysis will be labeled with self-adhesive, pre-printed labels indicating project name (or number), sample number, boring/well number, sample depth, date and time of sample collection, and required analyses. The same information will be recorded on the chain of custody.

**APPENDIX B**  
**WELL CONSTRUCTION**

## **GENERAL PRACTICES**

Each monitoring well will be designed to register the potentiometric surface, facilitate soil sampling, and permit water sampling. ACC's standard procedures for well installation and soil/water sampling meet or exceed guidelines set forth by the EPA, California State Regional Water Quality Control Board, and the Alameda County Department of Environmental Health. Drilling, construction, and completion of all exploratory borings and monitoring well will be in conformance with procedures in this appendix.

## **DRILLING PROCEDURES**

Monitoring well will be drilled with a hollow-stem, continuous-flight auger. All boring and logging will be supervised by a geologist with special attention given to the avoidance of cross contamination of underlying aquifers. The following procedures used by ACC geologist prevent pollution of clean aquifers underlying contaminated zones:

1. Drilling will cease if five feet of saturated impermeable material is encountered. It will be assumed that any significant saturated, impermeable layer, such as a clay layer, is an aquitard separating the shallow and deep aquifers and should not be penetrated.
2. Drilling will be terminated 20 feet below any perched or unconfined water table.
3. Drilling will be terminated at 45 feet below ground surface if groundwater is not encountered. This is above nearly all deep aquifers currently supplying groundwater in the Bay Area.

The drill rig operator and ACC geologist will discuss significant changes in material penetrated by the drill, changes in drilling conditions, hydraulic pressure, and drilling action. The ACC geologist will be present during the drilling of exploratory borings and will observe and record changes by time and depth, evaluate the relative moisture and content of the samples, and note water producing zones. This record will be used later to prepare a detailed lithologic log. Lithologic descriptions will include soil or rock type, color, grain size, texture, hardness, degree of induration, carbonate content, presence of fossils or other materials (gypsum, hydrocarbons), and other pertinent information. A copy of the logs will be retained in the field file at the project site.

## Soil Cuttings

Soil cuttings generated during drilling will be placed in steel, DOT-approved drums. Drums will be labeled as to contents, suspected contaminants, date container filled, expected removal date, company name and phone number of technical contact, and name of generator. Drums will be sealed and left on-site for subsequent disposal pending receipt of analytical results. Disposal of soil cuttings will be the responsibility of the owner/generator, although ACC may arrange for disposal if so requested.

## **SCREEN AND CASING**

The monitoring well assembly will consist of new schedule-40 (minimum), flush-threaded, polyvinyl chloride (PVC) casing from the bottom of the boring to the ground surface. Casing will be shipped in protective wrappers and carefully rinsed before installation.

From the base of the well to approximately five feet above the ground water surface, casing will consist of perforated casing (well screen); the remainder of the well will be solid PVC casing. Perforated casing (well screen) will be factory slotted. Screen sizes are intended to facilitate hydraulic connection between the monitoring well and the surrounding aquifer while retaining 70 to 90% of the filter pack material.

Upon completion of drilling, well casing will be assembled and lowered to the bottom of the boring. Since using glue to connect casing sections could cause false analytical interpretations of water quality, the casing will be connected with dry threads or slip joints. The bottom of the casing will be approximately flush with the bottom of the boring and will be capped with a threaded PVC cap or plug. Using the lithologic log for control, the ACC geologist will specify the exact depths of screened intervals so that the well screen is approximately opposite the water-bearing zone to be monitored.

Where possible, the casing will extend six inches above the ground surface. When monitoring wells are placed in traffic areas there they cannot extend above the surface, locking, pre-cast concrete or cast iron boxes and covers will be installed.

## **FILTER PACK**

After the monitoring well assembly has been lowered to the specified depth, filter pack will be placed in the annular space between the well casing and borehole from the bottom of the well to approximately two feet above the top of the well screen. The depth to the top of the filter pack will be verified using the tremie pipe or a weighted steel tape. Filter pack will be at least 95% silica sand. Sand will be hard, durable, well-rounded, spherical grains that have been washed until free of dust and contamination.

American Society for Testing and Materials (ASTM) recommends the following guidelines for screen slot and filter pack selection based on the anticipated strata:

Anticipated Soil Type	Recommended Well Screen Slot Size (inches)	Recommended Filter Pack Material (U.S. sieve sizes)
Sand & Gravel	0.030	20 to 4
Silt & Sand	0.020	30 to 8
Clay & Silt	0.010	50 to 16

Reference: Development Methods for Water Wells: An Anthology:  
NWWA Water Well Journal, June 1988.

#### **GROUT SEAL**

A layer of bentonite pellets approximately one foot thick will be placed above the filter pack and charged with water. The depth to the top of the bentonite pellets layer will be verified using the tremie pipe or a weighted steel tape.

A cement-bentonite grout mixture will be tremied into the annular space from the bentonite seal to the top of the well. The grout material will be a mixture of Portland Type I/II cement (94 lb.) to five gallons of clean water or a sand-cement slurry with a minimum of 11 sacks of portland Type I/II cement per cubic yard. Only clean water from a municipal supply shall be used to prepare the grout. Well development will not begin until the grout has set for a minimum of 72 hours.

#### **CAPPING WELLS**

Following well construction, a steel or pre-cast concrete wall vault (or valve box) will be completed below ground surface. A metal tag containing well number and construction data will be permanently attached to the well vault. A steel well cover clearly marked "monitoring well" will be bolted to the vault. A suitable watertight, locking well cap will be fitted to the riser casing to prevent the entry of surface runoff or foreign matter.

#### **WELL DEVELOPMENT**

When well installation is complete, the well will be developed by surging, and/or bailing, and/or pumping to remove fines from the formation and filter pack. Well development generally restores natural hydraulic properties to the adjacent soils and improves hydraulic properties near the borehole so the water flows more freely in the well. At the least, pumping should

continue until water in casing storage has been removed. There are at least two common methods for determining that water in casing storage has been removed and water is flowing freely from the aquifer: (1) Monitor water level while pumping. When the pumping water level has "stabilized," it is likely that little or no water from casing storage is being pumped. (2) Monitor the temperature, pH and conductivity of the water while pumping. When these parameters "stabilize," it is probable that little or no water from casing storage is being pumped and that most of the water is coming from the aquifer. ACC will use the latter method. During development, pH, specific conductance, and temperature of the return water from the water pump will be measured. Well development will proceed until these field-measured water quality parameters have stabilized and the water is, in the judgement of the geologist, at its greatest possible clarity.

Temperature, pH and specific conductance meters will be calibrated per manufacturer's guidelines. Calibration shall be documented in the field log book or data sheets and will include a description of the calibration method, identification number of equipment, and/or reagents used in calibration.

Temperature will be measured with a mercury-filled, Centigrade-scaled, bimetallic-element thermometer, or electronic thermistor.

pH measurements will be made shortly after collection of the sample preferably within a few minutes.

Conductivity will be measured by dipping the conductivity probe in the water source or sample. The probe must be immersed above the vent. The temperature of the sample will be used to calculate specific conductance from the conductivity measurement. Conductivity will be reported in units of micromhos per centimeter (mmho/cm) at 25°C.

#### **WELL PURGING AND WATER SAMPLING**

Purging and sampling will not begin for at least 72 hours following construction to allow grout to set. Purging and sampling will be in accordance with procedures in Appendix D, Water Sampling in Wells, and Boreholes.

#### **DOCUMENTATION**

A well construction diagram for each monitoring well will be completed by the geologist and submitted to the project manager when the work has been completed. In addition, the details of well installation, construction, development, and field measurements of water quality parameters will be summarized as daily entries in a field notebook or data sheets which will be submitted to the project manager when the work has been completed.

## **DRILLING EQUIPMENT DECONTAMINATION PROCEDURES**

The sampling equipment will be decontaminated before and after each use by steam cleaning or washing in an Alconox solution, followed by tap water and deionized water rinses. Only clean water from a municipal supply will be used for decontamination of drilling equipment. Equipment will be sealed in plastic bags or other sealed containers to prevent contact with solvents, dust or other contamination.

All rinsate used in the decontamination process will be stored on site in steel DOT approved drums. Drums will be labeled as to contents, suspected contaminants, date container was filled, expected removal date, company name, contact and phone number. These drums will be sealed and left on-site for subsequent disposal pending receipt of analytical results.

**APPENDIX C**  
**WATER SAMPLING IN WELLS AND BOREHOLES**



## **GENERAL CONSIDERATIONS**

In general, the composition of water within the well casing and in close proximity to the well is not representative of groundwater quality. This may be due to contamination by drilling fluids or equipment or disparities between the oxidation-reduction potential in the well and the redox potential in the aquifer. To obtain a representative sample of groundwater, the well should be pumped or bailed until the well is thoroughly flushed of standing water and contains fresh water from the aquifer. One common procedure is to pump or bail the well until a minimum of three boring volumes (or alternatively, 10 well volumes) have been removed.

At the least, pumping should continue until water in casing storage has been removed. There are at least two common methods for determining that water in casing storage has been removed and water is flowing freely from the aquifer: (1) Monitor water level while pumping. When the pumping water level has "stabilized," it is likely that little or no water from casing storage is being pumped. (2) Monitor the temperature, pH and conductivity of the water while pumping. When these parameters "stabilize," it is probable that little or no water from casing storage is being pumped and that most of the water is coming from the aquifer. ACC utilizes the latter method.

## **PURGING**

During each round of sampling, static water level will be measured prior to purging using an electronic sounder. All water-level measurements will be recorded to the nearest 0.01 foot with respect to mean sea level.

A minimum of three bore volumes will be purged from the well prior to sampling. Bore and well volumes will be calculated using the table in this Appendix. To ensure that water in the well has been exchanged, pumping or bailing shall commence at the top and work downward. The well will be allowed to return to 80% of the original water level before sampling.

Temperature, pH and specific conductance will be measured for each boring volume pumped. Purging will continue until these field-measured water quality parameters have stabilized and the water is, in the judgment of the geologist, representative of water in the aquifer. Data obtained from field water quality measurements will be recorded in the field log book or data sheets. A separate allot of groundwater collected from the purge water outlet stream will be used for field measurements; samples intended for laboratory analysis will not be used.

Temperature, pH and specific conductance meters will be calibrated per manufacturer's guidelines. Calibration will be documented in the field log book or data sheets and will include a description of the calibration method, identification number of equipment, and/or reagents used in calibration.

### VOLUME OF WATER IN CASING OR HOLE

Diameter of Casing or Hole (inches)	Gallons per foot of Depth	Cubic Feet per foot of Depth	Liters per Meter of Depth	Cubic Meters per Meter of Depth
1	0.041	0.0055	0.509	0.509 x 10 <sup>-3</sup>
1.5	0.092	0.0123	1.142	1.142 x 10 <sup>-3</sup>
2	0.163	0.0218	2.024	2.024 x 10 <sup>-3</sup>
2.5	0.255	0.341	3.167	3.167 x 10 <sup>-3</sup>
3	0.367	0.0491	4.558	4.558 x 10 <sup>-3</sup>
3.5	0.500	0.0668	6.209	6.209 x 10 <sup>-3</sup>
4	0.653	0.0873	8.110	8.110 x 10 <sup>-3</sup>
4.5	0.826	0.1104	10.26	10.26 x 10 <sup>-3</sup>
5	1.020	0.1364	12.67	12.67 x 10 <sup>-3</sup>
5.5	1.234	0.1650	15.33	15.33 x 10 <sup>-3</sup>
6	1.469	0.1963	18.24	18.24 x 10 <sup>-3</sup>
7	2.000	0.2673	24.84	24.84 x 10 <sup>-3</sup>
8	2.611	0.3491	32.43	32.43 x 10 <sup>-3</sup>
9	3.305	0.4418	41.04	41.04 x 10 <sup>-3</sup>
10	4.080	0.5454	50.67	50.67 x 10 <sup>-3</sup>
11	4.937	0.6600	61.31	61.31 x 10 <sup>-3</sup>
12	5.875	0.7854	72.96	72.96 x 10 <sup>-3</sup>
14	8.000	1.069	99.35	99.35 x 10 <sup>-3</sup>
16	10.44	1.396	129.65	129.65 x 10 <sup>-3</sup>
18	13.22	1.767	164.18	164.18 x 10 <sup>-3</sup>
20	16.32	2.182	202.68	202.68 x 10 <sup>-3</sup>
22	19.75	2.640	245.28	245.28 x 10 <sup>-3</sup>
24	23.50	3.142	291.85	291.85 x 10 <sup>-3</sup>
26	27.58	3.687	342.52	342.52 x 10 <sup>-3</sup>
28	32.00	4.276	397.41	397.41 x 10 <sup>-3</sup>
30	36.72	4.909	456.02	456.02 x 10 <sup>-3</sup>
32	41.78	5.585	518.87	518.87 x 10 <sup>-3</sup>
34	47.16	6.305	585.68	585.68 x 10 <sup>-3</sup>
36	52.88	7.069	656.72	656.72 x 10 <sup>-3</sup>

1 Gallon = 3.785 Liters

1 Meter = 3.281 Feet

1 Gallon Water Weighs 8.33 lbs. = 3.785 Kilograms

1 Liter Water Weighs 1 Kilogram = 2.205 lbs.

1 Gallon per foot of depth = 12.419 Liters per Foot of Depth

1 Gallon per Meter of Depth = 12.419 x 10<sup>-3</sup> cubic Meters per Meter of Depth

Temperature will be measured with a mercury-filled, Centigrade-scaled, bimetallic-element thermometer, or electronic thermistor.

Acidity/alkalinity (pH) will be measured by dipping the conductivity probe in the water source or sample; pH will be measured soon after collection of the sample, preferably within a few minutes.

Conductivity will be measured by dipping the conductivity probe in the water source or sample. The temperature of the sample will be used to calculate specific conductance from the conductivity measurement. Measurements shall be reported in units of micromhos per centimeter at 25°C.

### **SAMPLE COLLECTION**

Wells and borings will be sampled using a new, clean, disposable Teflon bailer attached to new, clean string. Sample vials and bottles will be filled to overflowing and sealed so that no air is trapped in the vial or bottle. Once filled, samples shall be inverted and tapped to test for air bubbles. Samples will be contained in vials and bottles approved by the US EPA and the Regional Water Quality Control Board. Some analyses may require separate sample containers in accordance with EPA methods described in 40 CFR Part 136 and SW-846.

Water samples intended for volatile hydrocarbon analysis will be contained in 40 ml VOA vials prepared according to EPA Method 602 will contain a small amount of preservative (HCL) in the voa. Samples intended for analysis by EPA Method 601 and EPA 624 GCMS procedures will not be preserved. Water samples intended for low level diesel analysis will be stored in amber glass 1-liter bottles to reduce degradation by sunlight. Antimicrobial preservative (HCL) may be added to the sample if a prolonged holding time is expected prior to analysis.

Sample containers will be labeled with self-adhesive, pre-printed tags. Labels will contain the following information in waterproof ink:

- o Project number (or name)
- o Sample number (or name)
- o Sample location (Well number, etc.)
- o Date and time samples were collected
- o Treatment (preservative added, filtered, etc.)
- o Name of sample collector

All purged water will be stored on site in steel, DOT-approved drums. Drums will be labeled as to contents, suspected contaminants, date container filled, expected removal date, company name, contact and phone number. The drums will be left on-site for subsequent disposal pending receipt of analytical results.

## **DOCUMENTATION**

Sampling information will be recorded in ink in a bound notebook with consecutively numbered pages. Pages will not be removed for any reason. Alternatively, specially formatted field data sheets may be used to record the information collected during water quality sampling. Errata may be marked out with a single line and initialed by the person making the change. The log book and data sheets will be placed in the project file when sampling is completed.

## **FIELD EQUIPMENT DECONTAMINATION PROCEDURES**

Bailers and string will be properly disposed of off-site. All other sampling equipment, such as buckets and stands, will be decontaminated after each use by washing in an Alconox solution, followed by tap water and deionized water rinses. Equipment will be sealed in plastic bags or sealed containers to prevent contact with solvents, dusts, or other types of contamination.

All rinsate used in the decontamination process will be stored on site in steel DOT-approved drums. Drums will be labeled as to contents, suspected contaminants, date container filled, expected removal date, company name, contact and phone number. These drums will be sealed and left on-site for subsequent disposal pending receipt of analytical results.

**APPENDIX D**

**SITE SPECIFIC  
HEALTH AND SAFETY PLAN**

92 JUN 10 10 11 26

June 9, 1992

Mr. Donald Diel  
Alameda Unified School District  
2200 Central Avenue  
Alameda, CA 94501


RE: Work Plan for Monitoring Well Installation

Dear Don:

Enclosed, please find the Work Plan for the monitoring well installation with quarterly sampling at the Alameda Historical High School, 2200 Central in Alameda, California, per request of Alameda County Health Agency - Hazardous Materials Section.


If you have any question regarding this Work Plan, please do not hesitate to contact me.

Sincerely,

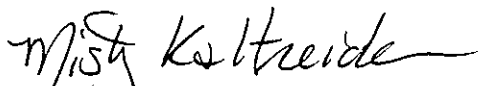


Misty Kaltreider  
Geologist

Encl.

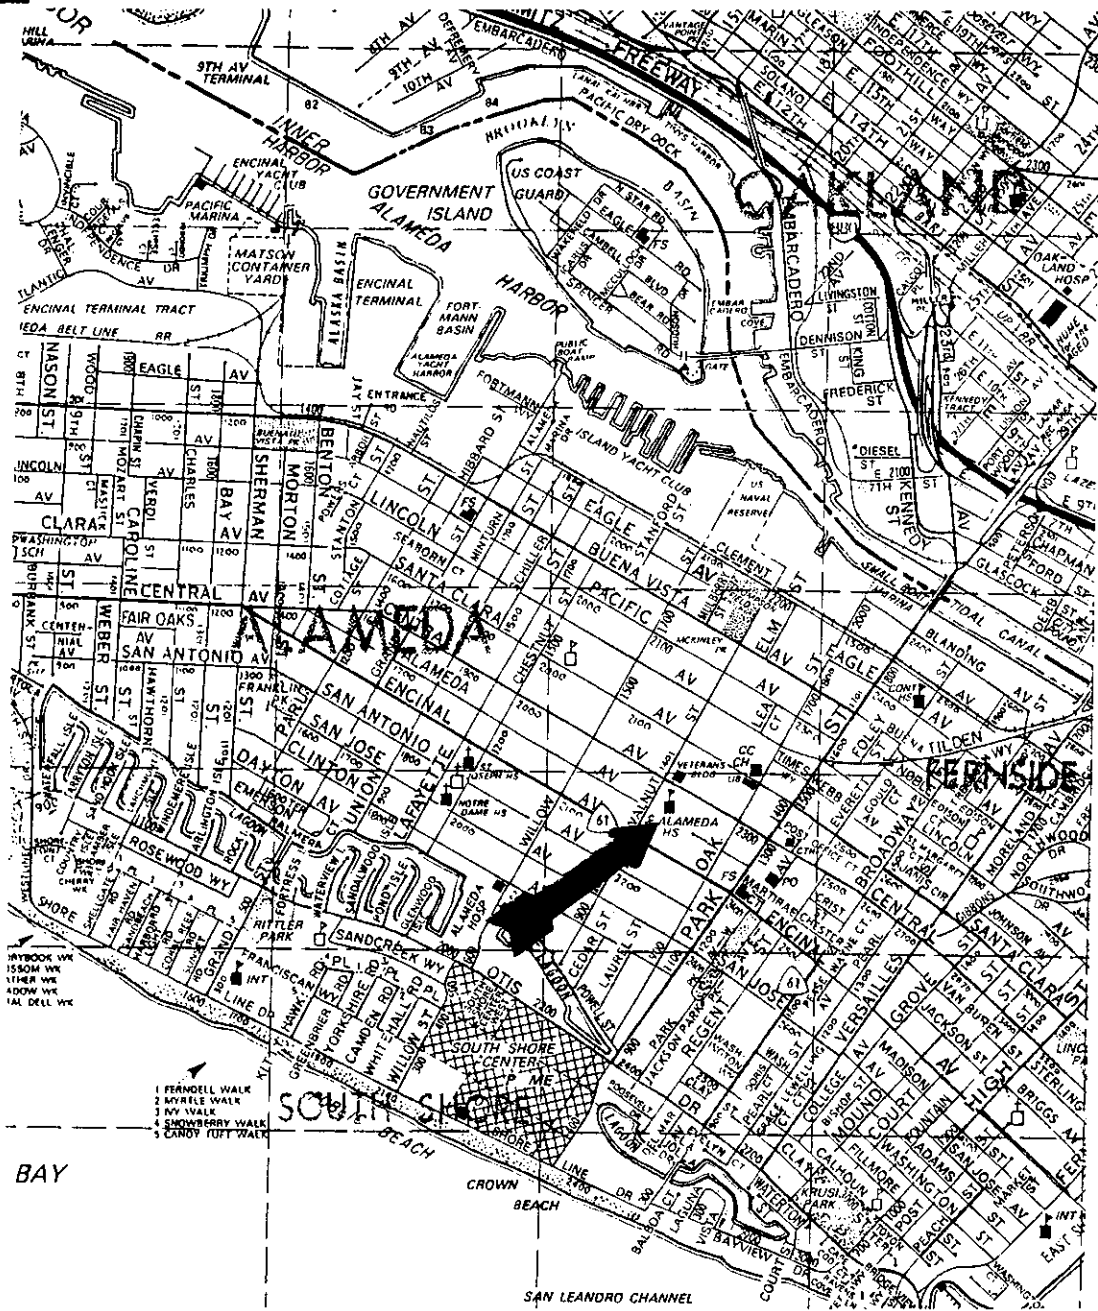

(Source: Thomas Bros)

<p>ACC Environmental Consultants, Inc. 1000 Atlantic Avenue, Suite 110 Alameda, California 94501</p>		<p>Yicinity Map Alameda Historical High School 2200 Central Ave. Alameda, CA</p>	
<p>Project No. 6029-2</p>	<p>Date: 6/01/92</p>	<p>Dn by: MCK</p>	<p>Figure No. 1</p>

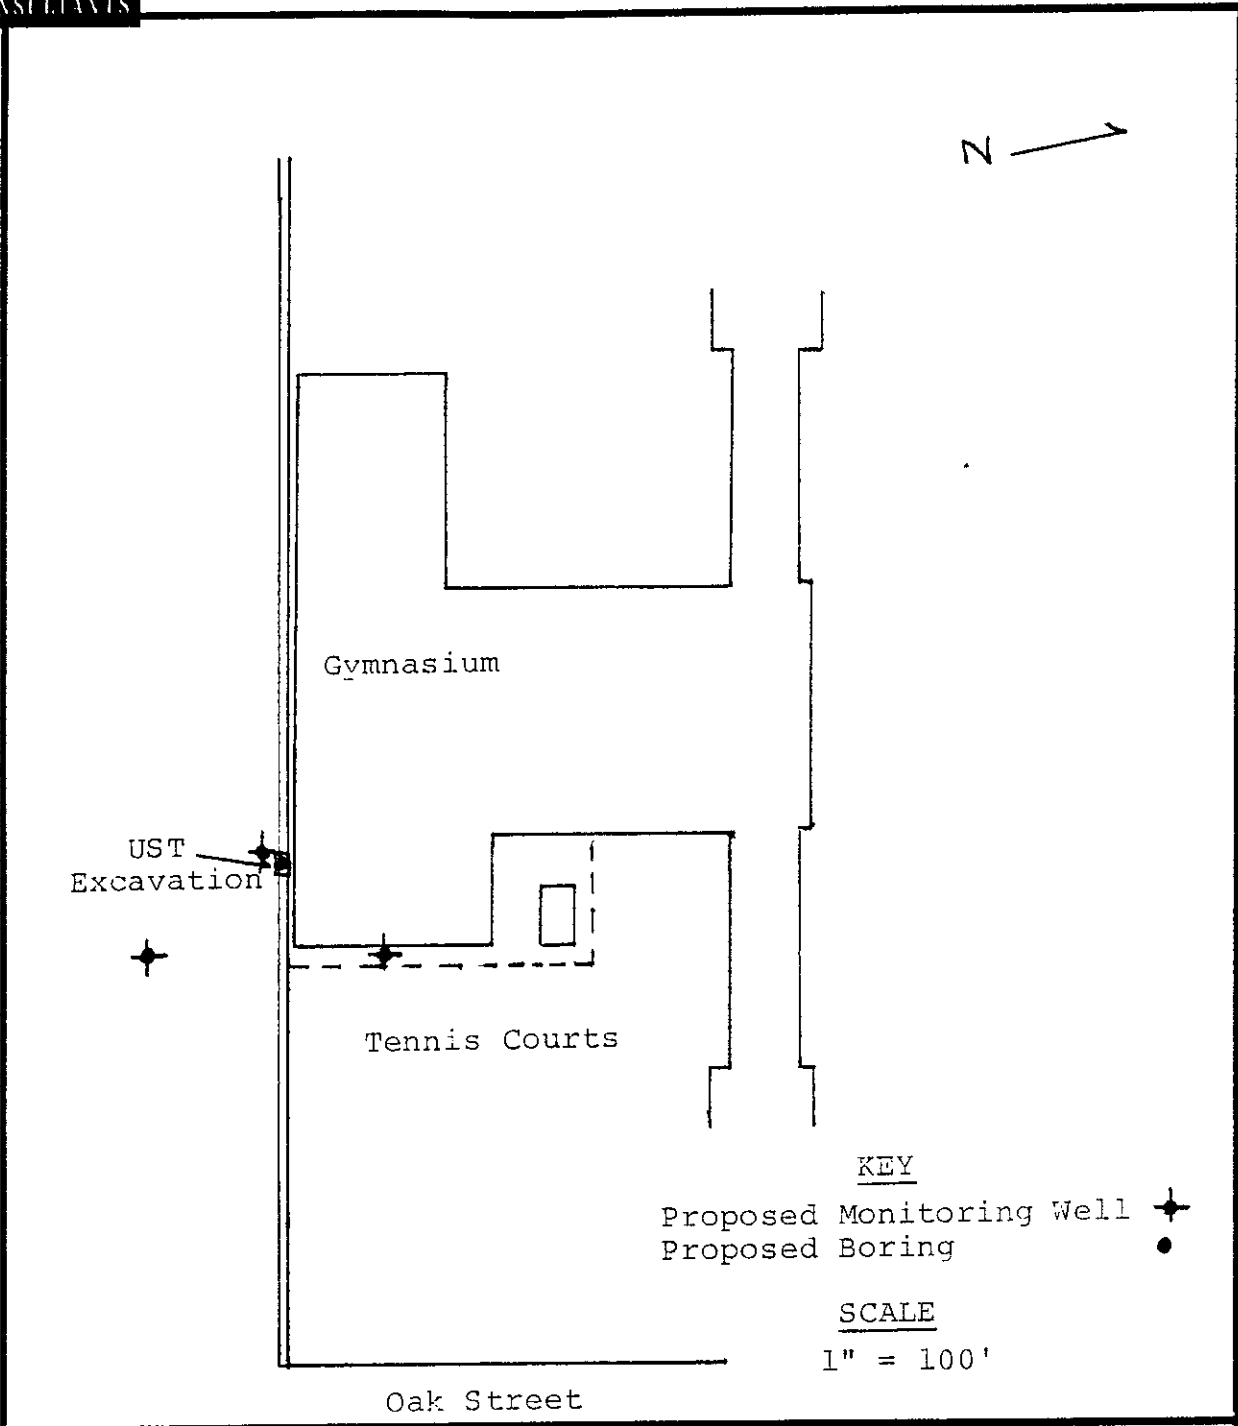

ACC Environmental Consultants, Inc.  
1000 Atlantic Avenue, Suite 110  
Alameda, California 94501

Site Plan  
Alameda Historical High School  
2200 Central Ave.  
Alameda, CA

Project No. 6029-2

Date: 6/01/92

Dn by: MCK

Figure No. 2



ACC

SITE SAFETY PLAN

A. GENERAL INFORMATION

Project Title: Alameda Historical High School

Project No.: 6029-2a

Project Manager: Misty Kaltreider

Location: 2200 Central Avenue, Alameda, California

Prepared by/date: Misty Kaltreider, June 8, 1992

Approved by/date: \_\_\_\_\_

Scope of Work/Objective(s): Soil boring - installation of monitoring wells.

Proposed Date of Field Activities: \_\_\_\_\_

Documentation/Summary:

Overall Chemical Hazard:	Serious [ ]	Moderate [ ]
	Low [ X ]	Unknown [ ]
Overall Physical Hazard:	Serious [ ]	Moderate [ X ]
	Low [ ]	Unknown [ ]

B. SITE/WASTE CHARACTERISTICS

Waste Types(s):

Liquid [ ] Solid [ X ] Sludge [ ] Gas/Vapor [ ]

Characteristics:

Flammable/ Ignitable [ ] Volatile [ ] Corrosive [ ] Acutely Toxic [ ]

Explosive [ ] Reactive [ ] Carcinogen [ ] Radio-active [ ]

Other: \_\_\_\_\_

Physical Hazards:

Overhead [ ] Confined Space [ ] Below Grade [ ] Trip/ [ X ]  
Fall  
Puncture [ ] Burn [ ] Cut [ ] Splash [ ]  
Noise [ ] Other: Hazards associated with drilling

Site History/Description and Unusual Features: Drilling and sampling within the vicinity of leaking heating oil tank excavation.

Locations of Chemicals/Waste: In soil and water

Estimated Volume of Chemicals/Waste: Unknown

Site Currently in Operation: Yes [ X ] No [ ]

-----  
C. HAZARD EVALUATION

List and Evaluate Hazards By Task (ie. sampling/ drilling)

Physical Hazard Evaluation:

Task 1. Drilling

Task 2. Sampling

Task 3. Installation of monitoring wells.

Task 4. Groundwater sampling.

Task 5. \_\_\_\_\_

Chemical Hazard Evaluation:

Compound	PEL/TWA	Route of Exposure	Acute Symptoms	Odor Threshold/Desc.
Heating oil	300ppm	inhalation, dermal ingestion	skin blisters nausea, central nervous system.	characteristic odor.

D. SITE SAFETY AND WORK PLAN

Site Control: Attach map of the site.

Perimeter identified? [ N ] Site secured? [ Y ]

Work areas identified? [ Y ] Zone(s) of contamination identified? [ N ]

Anticipated Level of Protection (refer to task numbers in Sec. C)

	A	B	C	D
Task 1				X
Task 2				X
Task 3				X
Task 4				X

(expand if necessary)

Modifications:

---

Air Monitoring:

Contaminant of Interest	Type of Sample	Monitoring Equipment	Frequency of Sampling
Heating oil	air	HNu	Continuous - as needed

(expand if necessary)

Decontamination procedures and solutions: Tri-sodium phosphate and water.

Special Site Equipment: (Sanitary facilities, lighting, etc)  
None anticipated.

Site Entry Procedures and Special Considerations

Underground Services Alert (USA) notified to avoid underground utilities.

Work Limitations (time of day, weather conditions, etc.)

none anticipated.

General Spill Control, if applicable: N/A

Investigation-Derived Material Disposal (expendables, cuttings, etc.)

Drum cuttings and rinsate water - covered and labeled in 55 gallon drums.

Sample Handling Procedures:

Soil samples collected in brass tubes, teflon tape and plastic end caps taped to each end. Water samples collected in VOA vials without headspace. All samples will be placed in ice-filled coolers until pick-up by laboratory.

E. EMERGENCY INFORMATION

Ambulance 911

Hospital Emergency Room 510 523-4357

Directions to Hospital (attach map) Alameda Hospital - 2070 Clinton Avenue

Poison Control Center 911

Police 911

Fire Department 911

Laboratory ChromaLab Analytical

UPS/Fed. Express N/A

Client Contact Don Diel (510) 748-4090

Site Contact Don Diel (510) 748-4090

SITE RESOURCES

Water Supply Source on-site

Telephone on-site

Cellular Phone, if available -----

Other -----

### EQUIPMENT CHECKLIST

Protective Gear	Quantity	Instrumentation	Quantity
Respirator	-----	O2/Explosimeter	-----
Cartridges(type)	-----	PID (HNU)	X
Protective Suit (type)	Tyvek	Draeger Pump (tubes)	-----
Surgical Gloves	X	Heat Stress Monitor	-----
Gloves (type)	Nitrile	Personal Sampling Pumps	-----
Steel Toed Safety Boots (leather/neoprene)	X		
Hard Hat	-----		
Safety Glasses	X		
Ear Plugs	-----		

First Aid Equipment	Quantity	Sampling Equipment	Quantity
First aid kit	-----	8 oz. bottles	-----
Portable eye wash	-----	Half gallon bottles	-----
Blood pressure monitor	-----	VOA bottles	X
Fire extinguisher	-----	String	X
		Hand bailers	X
		Spoons	-----
		Personal sampling pump supplies	X
		Shovel	X

Miscellaneous -----	Quantity -----
Surveyor's tape	----- X -----
Fiberglass tape	-----
Nylon rope/string	----- X -----
Surveying flags	-----
Camera/film	----- X -----
Banner tape	-----
Coolers	----- X -----
Strapping tape	----- X -----
Bottle lables	----- X -----
Baggies	----- X -----
Custody seals	----- X -----
Chain of custody forms	----- X -----
Federal Express forms	-----
Bubble wrap	-----
Trash bags	----- X -----
Paper towels	----- X -----
Detergent (TSP)	----- X -----
Buckets	----- X -----
Brushes	----- X -----

SITE SAFETY REVIEW

General Information

Date \_\_\_\_\_ Time \_\_\_\_\_ Project No. 6029-2a

Site Alameda Historical High School

Location 2200 Central Avenue, Alameda, California

Client Contact Don Diel, (510) 748-4090

Objectives Soil borings - monitoring well installation

Types of Chemicals Anticipated Heating oil

Topics Discussed

Physical Hazards Typical hazards associated with drilling.

Chemical Hazards Heating oil.

Personal Protection \_\_\_\_\_

Decontamination Equipped to ve decontaminated after each boring.

Rinsate water will be drummed.

Special Site Considerations None anticapted.

ATTENDEES

Name Printed

Signature

-----  
-----  
-----  
-----  
-----  
-----

\_\_\_\_\_  
-----  
-----  
-----  
-----  
-----



COPYRIGHT © 1989 BY Thomas Bros. Maps

FOR CONTINUATION SEE MAP 8

FOR CONTINUATION SEE MAP 12

DETAIL



474,  
472,  
470,  
464,  
462,  
460,

1  
2  
3  
4  
5  
6  
7