

**GROUNDWATER
TECHNOLOGY** ®

Groundwater Technology, Inc.

4057 Port Chicago Highway, Concord, CA 94520 USA
Tel: (510) 671-2387 Fax: (510) 685-9148

**WORK PLAN FOR ADDITIONAL SITE ASSESSMENT
FORMER SIGNAL SERVICE STATION NO. S0800
800 CENTER STREET
OAKLAND, CALIFORNIA**

3-27-95

GTI Project 020200105

March 27, 1995

Prepared for:
Mr. Mark Miller

Chevron U.S.A. Products Company
6001 Bollinger Canyon Road, Building L
San Ramon, California 94583-0804

95 APR 11 PM 12:03

ENVIRONMENTAL
PROTECTION

Groundwater Technology, Inc.
Submitted by:




Michael A. Chamberlain
Project Manager

Groundwater Technology, Inc.
Approved by:



E.K. Simonis, RG
Senior Environmental Geologist

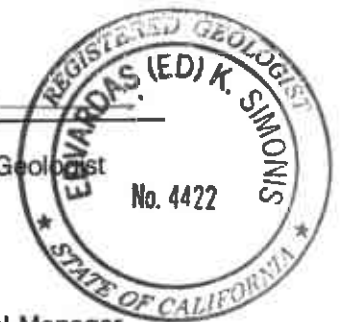

For:
Wendell W. Lattz
Vice President, General Manager
West Region

0105P015.020

CONTENTS

1.0 INTRODUCTION 1

2.0 SCOPE OF WORK 1

 2.1 Site-Specific Health and Safety Plan, Background Review, and Permitting 1

 2.2 Soil Borings, Sampling and Analyses, and Monitoring Well Installation 1

 2.3 Well Development, Surveying, and Groundwater Monitoring 2

 2.4 Well Purging, Water Sampling, and Analyses 3

 2.5 Report Preparation 3

3.0 PROJECT SCHEDULE 3

Figures

- 1. Site Location Map
- 2. Site Plan

Appendixes

- A. Groundwater Technology, Inc. Standard Operating Procedures
- B. Well Construction Specifications

1.0 INTRODUCTION

Groundwater Technology, Inc. has prepared this *Work Plan for Additional Site Assessment* to investigate subsurface soil and groundwater conditions at the former Signal Service Station No. S0800, located at 800 Center Street in Oakland, California (Figure 1).

2.0 SCOPE OF WORK

The scope of work consists of drilling seven (7) soil borings, complete four soil borings as 2-inch diameter permanent groundwater monitoring well (MW-1 through MW-4), collecting soil and groundwater samples, submitting soil and groundwater samples for laboratory analyses, and preparing a summary report. The tasks required to meet these objectives are discussed below.

7 total

2.1 Site-Specific Health and Safety Plan, Background Review, and Permitting

A site-specific *Health and Safety Plan* has been previously prepared by Groundwater Technology as required by the Occupational Health and Safety Administration Standard "Hazardous Waste Operations and Emergency Response" guidelines (29 CFR 1910.120). The *Health and Safety Plan* will be reviewed and signed by Groundwater Technology personnel and subcontractors performing work at the site before field operations begin.

Groundwater Technology will review historical site information. This information will consist of Groundwater Technology reports and additional historical data provided by Chevron U.S.A. Products Company (Chevron). Monitoring well drilling permit applications will be completed and submitted to the Alameda County Zone 7 Water Agency (Zone 7).

2.2 Soil Borings, Sampling and Analyses, and Monitoring Well Installation

Groundwater Technology will supervise the drilling of seven soil borings using a truck mounted drilling rig equipped with 8-inch hollow-stem augers. Three soil borings (SB-1 through SB-3) will be drilled to approximately 12 feet below surface grade for soil sample collection. Four soil borings (MW1 through MW-4) will be drilled to approximately 15 feet below surface grade for soil sample collection and completion as groundwater monitoring wells. The water table is expected to be encountered at approximately 8 to 12 feet below surface grade. To avoid introducing off-site or cross contamination, the hollow-stem augers will be steam cleaned before each soil boring, and all

ok

sampling equipment will be properly cleaned before sampling. Groundwater Technology assumes that the drilling will be completed in two days. Soil samples will be collected at 5-foot intervals and at notable lithologic changes using a split-spoon sampler lined with three 2-inch-diameter by 6-inch-long brass sample tubes. Groundwater Technology Standard Operating Procedures (SOPs) are included in Appendix A. Each soil sample will be screened for volatile organic compounds using a photo-ionization detector (PID). The soil samples will be logged using the Unified Soil Classification System by a Groundwater Technology field geologist working under the supervision of a California registered geologist. One sample from every 5-foot interval will be sealed with aluminum foil, capped with plastic caps, taped, labeled, and placed on ice in an insulated container. Soil generated through drilling activities will be placed on and covered with plastic sheets. One composite soil sample from the drill cuttings will be analyzed for benzene, toluene, ethylbenzene, total xylenes (BTEX) and total petroleum-hydrocarbons-as-gasoline (TPH-g) to characterize the cuttings for disposal. After characterization, the soil will be transported to a licensed disposal facility by a licensed transportation company.

Two soil samples from each soil boring exhibiting the highest volatile organic compound readings with the PID will be chosen for chemical analyses. The soil samples will be analyzed by a California-certified laboratory for benzene, toluene, ethylbenzene, total xylenes (BTEX) and total petroleum-hydrocarbons-as-gasoline (TPH-g) concentrations using Environmental Protection Agency (EPA) Methods 8020/5030/8015. One composite soil sample from the drill cuttings will be analyzed for BTEX and TPH-g to characterize the cuttings for disposal.

*add
TPH-g*

Groundwater Technology personnel will install groundwater monitoring wells in four soil borings (Figure 2). The monitoring wells will be constructed of 2-inch-diameter Schedule 40 poly-vinyl-chloride (PVC) casing with flush threads and 0.020-inch-slot well screen. The well screen for the monitoring wells will be installed approximately 5 feet above and 3 feet below the water table to permit entry of separate-phase hydrocarbons, if present, and to allow for seasonal fluctuation of the water table. A sand filter will be placed around the well screen to a maximum height of 2 feet above the top of the screen. The well will be sealed to grade with 1 foot of bentonite followed by a neat-cement grout containing 95 pounds Portland Type I/II cement to 5 gallons of clean water. The wellhead will be protected by a watertight locking cap and a road box. A typical groundwater monitoring well construction diagram is presented in Appendix B.

2.3 Well Development, Surveying, and Groundwater Monitoring

Approximately 48 hours after installation, the monitoring wells will be developed by surging and hand bailing to remove fine-grain sediments from the well and filter pack. Water from the development

process will be transported by Groundwater Technology to the Chevron Terminal in Richmond, California for recycling.

Approximately 48 hours after development of the monitoring wells, the water table will be monitored to measure static groundwater levels and the thickness of separate-phase hydrocarbons, if present. The water-table levels will be measured using an ORS Environmental Equipment INTERFACE PROBE™ Well Monitoring System, which consists of a dual optical sensor and electrical conductivity probe that distinguishes between water and petroleum products. The top of the casing of the monitoring wells will be surveyed to mean sea level relative to an established benchmark by a licensed surveyor. The survey data will be used with the depth-to-water measurements to calculate water elevation in the site monitoring wells and to estimate the local groundwater flow direction and gradient.

2.4 Well Purging, Water Sampling, and Analyses

After groundwater monitoring, approximately 4 well-casing volumes of water will be removed from the well before sampling. The field technician will maintain a log that includes observations and measurements of pH, temperature, and conductivity values for the water purged. Groundwater Technology personnel will collect groundwater samples from the newly installed monitoring wells. The groundwater samples from the four wells will be analyzed for BTEX and TPH-g using EPA Methods 8020/5030/8015. The groundwater monitoring and sampling activities will be conducted according to Groundwater Technology's SOPs (Appendix A). Purge water from the monitoring well will be transported by Groundwater Technology to the Chevron Terminal in Richmond, California for recycling.

*add
TPH-g*


2.5 Report Preparation

Groundwater Technology will prepare a site assessment report summarizing the data collected. The report will include descriptions of methods used, laboratory results, and site-specific maps.

3.0 PROJECT SCHEDULE


Groundwater Technology is prepared to begin work on this project immediately after approval by Chevron, the Alameda County Health Care Services Agency, Zone 7, and the City of Oakland.

Groundwater Technology estimates the project will be completed approximately 3 weeks after receiving data from the laboratory.

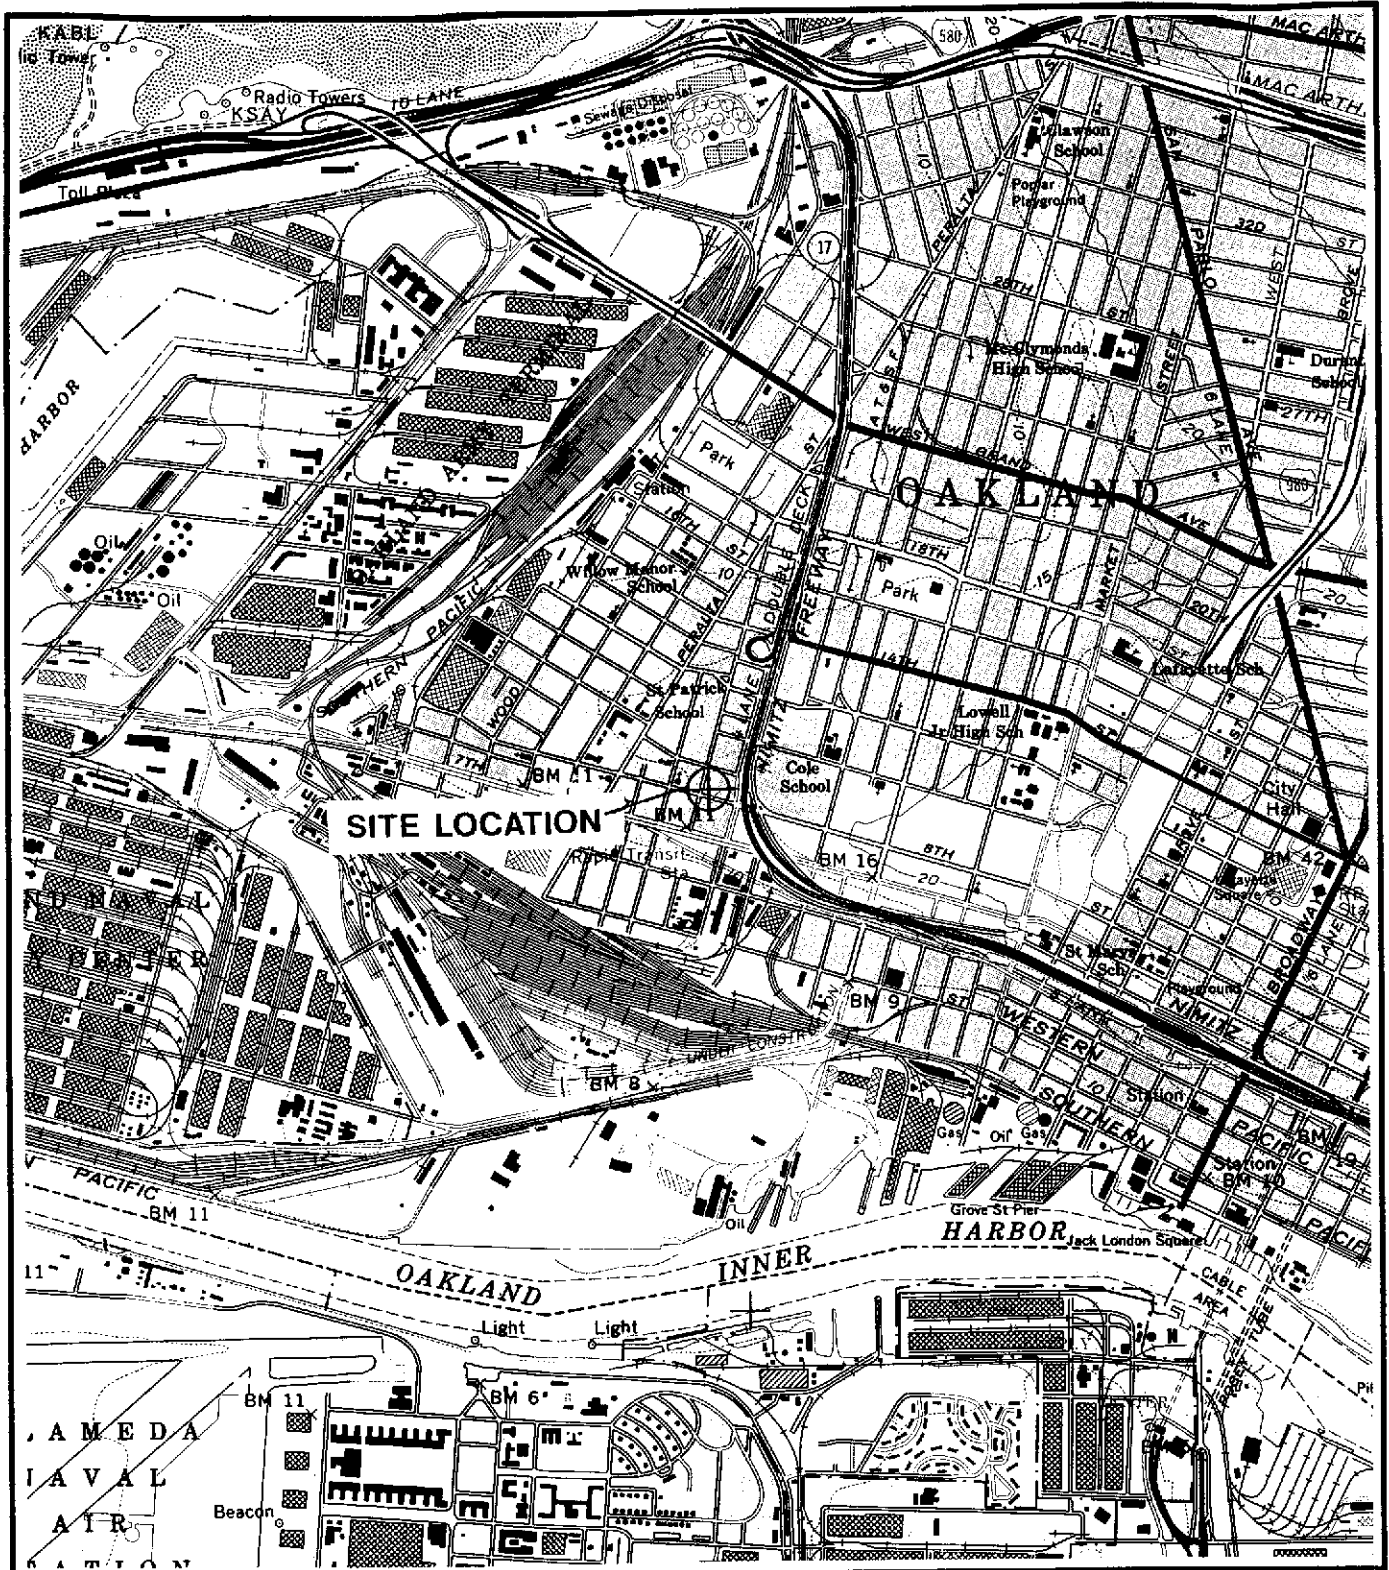

**GROUNDWATER
TECHNOLOGY**

SOURCE: U.S.G.S. 7.5' QUAD SHEET
OAKLAND WEST, CALIFORNIA
PHOTOREVISED 1980



SCALE:

0 FEET 2000

SITE LOCATION MAP

CLIENT:

CHEVRON U.S.A. PRODUCTS CO.
SERVICE STATION NO. S0800

DATE:


3/7/95

LOCATION:

800 CENTER STREET
OAKLAND, CALIFORNIA


FIGURE:

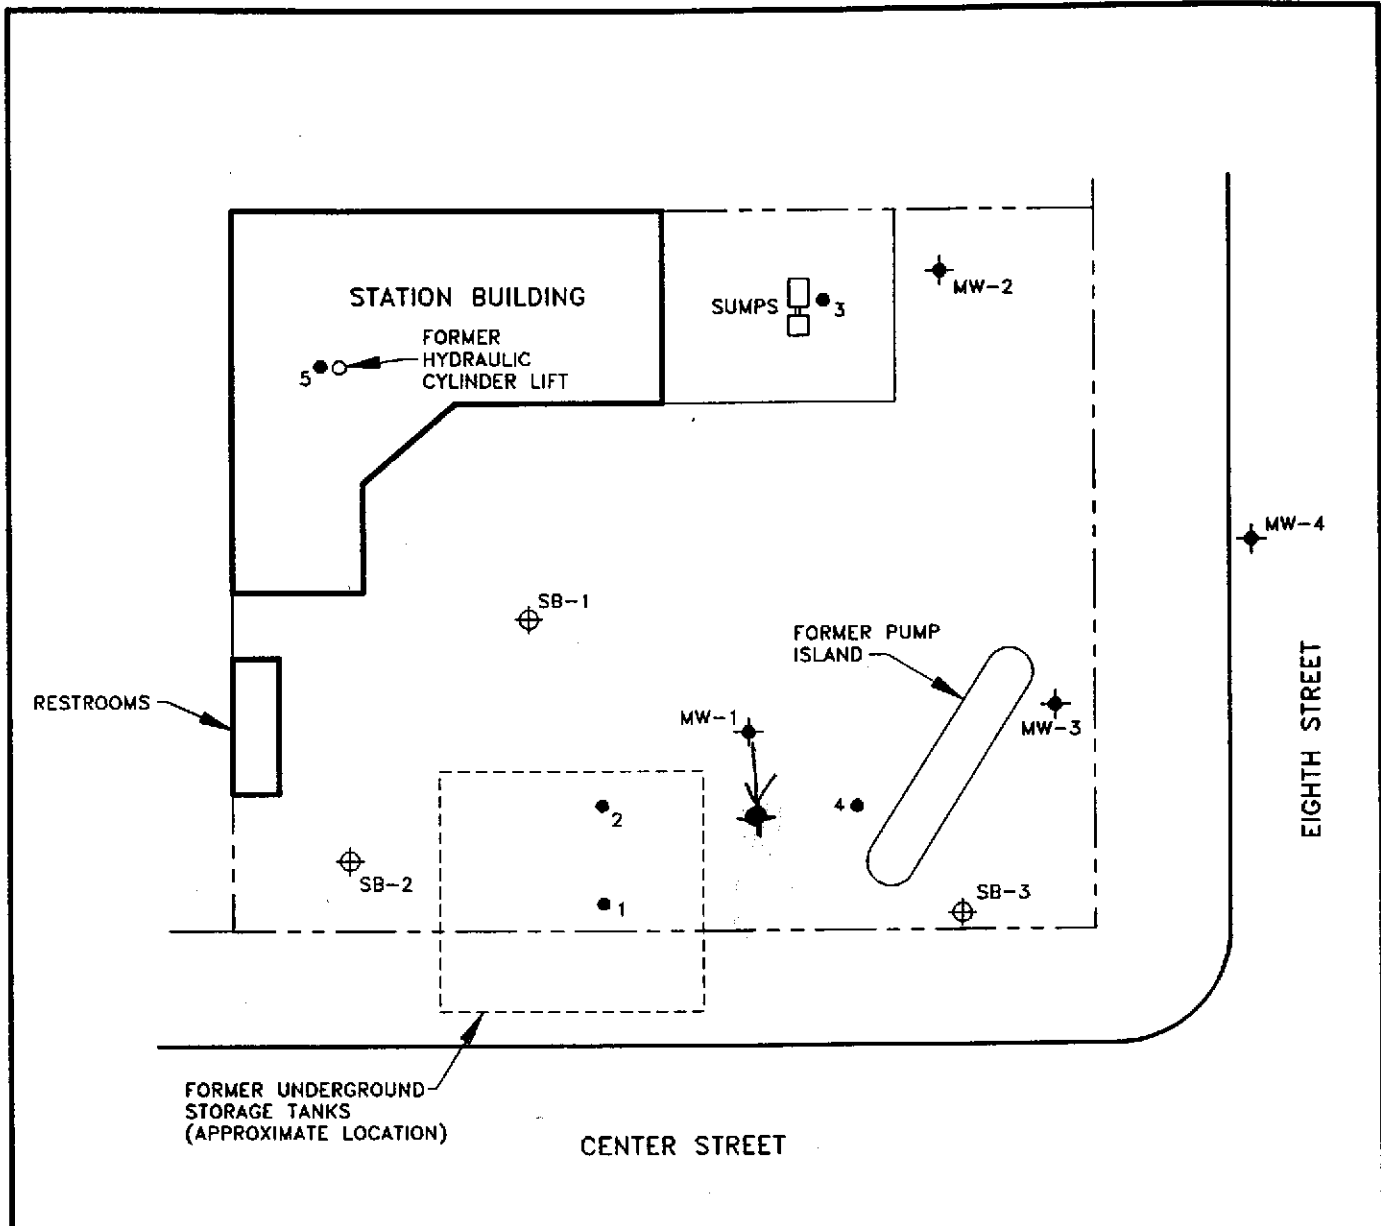

1



LEGEND

- TEST BORING
- ◆ PROPOSED MONITORING WELL
- ⊕ PROPOSED SOIL BORING



 GROUNDWATER TECHNOLOGY	 SCALE	SITE PLAN		
CLIENT: CHEVRON U.S.A. PRODUCTS CO. SERVICE STATION NO. S0800	FILE: SP395	PROJECT NO: 020200036	PM	RG/PE
LOCATION: 800 CENTER STREET OAKLAND, CALIFORNIA	REV: 1	DES: MC	DET: ML	DATE: 3/7/95
FIGURE:				2

APPENDIX A

**GROUNDWATER TECHNOLOGY, INC.
STANDARD OPERATING PROCEDURES**

0105R015.020

GROUNDWATER TECHNOLOGY, INC.
STANDARD OPERATING PROCEDURE NO. 8
GROUNDWATER MONITORING

Groundwater monitoring of wells at the site shall be conducted using an ORS Environmental Equipment (ORS) INTERFACE PROBE™ or SURFACE SAMPLER™. The INTERFACE PROBE™ is a hand-held, battery-operated device for measuring depth to petroleum product and depth to water as measured from an established datum (*i.e.*, top of the well casing which has been surveyed). Floating separate-phase hydrocarbon (product) thickness is then calculated by subtracting the depth to product from the depth to water. In addition, water elevations are adjusted for the presence of floating product with the following calculation:

$$(\text{Product Thickness}) \times (0.8) + (\text{Water Elevation}) = \text{Corrected Water Elevation}$$

Note: The factor of 0.8 accounts for the density difference between water and petroleum hydrocarbons.

The thickness of dense non-aqueous phase liquids (DNAPLs) is calculated by subtracting the depth at which the DNAPL is encountered from the total depth of the well. Water-level elevations are not typically corrected for the presence of DNAPLs.

The INTERFACE PROBE™ consists of a dual-sensing probe which utilizes an optical liquid sensor and electrical conductivity to distinguish between water and petroleum products. A coated steel measuring tape transmits the sensor's signals to the reel assembly where an audible alarm sounds a continuous tone when the sensor is immersed in petroleum product and an oscillating tone when immersed in water. The INTERFACE PROBE™ is accurate to 0.01 inch.

A SURFACE SAMPLER™ shall be used for visual inspection of the groundwater to note sheens (difficult to detect with the INTERFACE PROBE™), odors, microbial action, etc.

The SURFACE SAMPLER™ used consists of a 12-inch-long case acrylic tube with a Delrin ball which closes onto a conical surface creating a seal as the sampler is pulled up. The sampler is calibrated in inches and centimeters for visual inspection of product thickness.

To reduce the potential for cross contamination between wells, the monitoring shall take place in order from the least to the most contaminated wells. Wells containing separate-phase hydrocarbons (free product) should be monitored last. Between each monitoring the equipment shall be washed with laboratory-grade detergent and double rinsed with distilled water.

GROUNDWATER TECHNOLOGY, INC.
STANDARD OPERATING PROCEDURE NO. 9
WATER SAMPLING METHODOLOGY

Before water sampling, each well shall be purged by pumping a minimum of four well volumes or until the discharge water indicates stabilization of temperature conductivity and pH. If the well is evacuated before four well volumes are removed or stabilization is achieved, the sample should be taken when the water level in the well recovers to 80 percent of its initial level.

Retrieval of the water sample, sample handling and sample preservation shall be conducted according to Standard Operating Procedure 10 concerning "Sampling for Volatiles in Water." The sampling equipment used shall consist of a Teflon® and/or stainless steel samplers which meet U.S. Environmental Protection Agency (EPA) regulations. Glass vials with Teflon® lids should be used to store the collected samples.

To ensure sample integrity, each vial shall be filled with the sampled water in such a way that the water stands above the lip of the vial. The cap should then be quickly placed on the vial and tightened securely. The vial should then be checked to ensure that air bubbles are not present prior to labeling of the sample. Label information should include a sample identification number, job identification, date, time, type of analysis requested, and sampler's name. Chain-of-custody records shall be completed according to Standard Operating Procedure (SOP) 11 concerning chain of custody.

The vials should be immediately placed in high quality coolers for shipment to the laboratory. The coolers should be packed with sufficient ice or freezer packs to ensure that the samples are kept below 4° Celsius (C). To minimize sample degradation the prescribed analysis shall take place within seven days of sample collection unless specially prepared acidified vials are used.

To minimize the potential for cross contamination between wells, all the well development and water sampling equipment which contacts the groundwater shall be cleaned between each sampling. As a second precautionary measure, the wells shall be sampled in order of increasing contaminant concentrations (the least contaminated well first, the most contaminated well last) as established by previous analysis.

GROUNDWATER TECHNOLOGY, INC.
STANDARD OPERATING PROCEDURE NO. 10
SAMPLING FOR VOLATILES IN WATER (DISSOLVED GASOLINE, SOLVENTS, ETC.)

1. Use only vials properly washed and oven dried (prepared by the laboratory).
2. Use clean sampling equipment. Scrub with Alconox or equivalent laboratory detergent and water followed by a thorough water rinse. Complete with a distilled water rinse.

Sampling equipment which has come into contact with liquid hydrocarbons (free product) should be regarded with suspicion. Such equipment should have tubing and cables replaced and all resilient parts washed with laboratory detergent solution as indicated above. Visible deposits may have to be removed with hexane. Solvent washing should be followed by detergent washing, as indicated above.

This procedure is valid for volatile organic analysis only. For extractable organics (for example, pesticides, or base neutrals for U.S. Environmental Protection Agency [EPA] Method 625 a final rinse with pesticide-grade isopropyl alcohol), followed by overnight or oven drying will be necessary.

3. Take duplicate samples. Mark on forms as a single sample with two containers to avoid duplication of analyses.
4. Take a site blank using distilled water or known uncontaminated source. This sample will be run at the discretion of the project manager.
5. Fill out labels and forms as much as possible ahead of time. Use an indelible marker.
6. Preservatives are required for some types of samples. Use specially prepared vials marked as indicated below, or use the appropriate field procedure (SOP 12 for acidification). Make note on forms that samples were preserved. Always have extra vials in case of problems. Samples for volatile analyses should be acidified below pH 2. Eye protection, foot protection, and disposable vinyl gloves are required for handling. Samples designated for expedited service and analyzed within seven (7) days of sampling will be acceptable without preservation. Glasses or goggles (not contact lenses) are necessary for protection of the eyes. Flush eyes with water for 15 minutes if contact occurs and seek medical attention. Rinse off hands frequently with water during handling.

For sampling chlorinated drinking water supplies for chlorinated volatiles, samples shall be preserved with sodium thiosulfate. Use vials labeled "CONTAINS THIOSULFATE." No particular cautions are necessary.

7. Fill vial to overflowing with water, avoiding turbulence and bubbling as much as possible. Water should stand above lip of vial.
8. Carefully, but quickly, slip cap onto vial. Avoid dropping the Teflon® septum from cap by not inverting cap until it is in contact with the vial. Disc should have Teflon® face toward the water. Also avoid touching white Teflon® face with dirty fingers.
9. Tighten cap securely, invert vial, and tap against hand to see there are not bubbles inside.
10. Label vial, using indelible ink, as follows:
 - A. Sample I.D. No.
 - B. Job I.D. No.
 - C. Date and Time
 - D. Type of analysis required
 - E. Your name
11. Unless the fabric-type label is used, place Scotch™ tape over the label to preserve its integrity.
12. For chain-of-custody reasons, sample vial should be wrapped end-for-end with Scotch™ tape or evidence tape and signed with indelible ink where the end of the tape seals on itself. The septum needs to be covered.
13. Chill samples immediately. Samples to be stored should be kept at 4° Celsius (C) (39.2° Fahrenheit [F]). Samples received at the laboratory above 10° C (as measured at glass surface by a thermocouple probe), after overnight shipping, will be considered substandard, so use a high quality cooler with sufficient ice or freezer packs.
14. Fill out Chain-of-Custody Manifest and Analysis Request Form (see Chain of Custody Procedures, SOP 11).

GROUNDWATER TECHNOLOGY, INC.
STANDARD OPERATING PROCEDURE NO. 11
CHAIN-OF-CUSTODY PROTOCOL

1. Samples must be maintained under custody until shipped or delivered to the laboratory. The laboratory will then maintain custody. A sample is under custody if:
 - a) It is in your possession
 - b) It is in your view after being in your possession
 - c) You locked it up after it was in your possession
 - d) It is in a designated secure area

2. Custody of samples may be transferred from one person to another. Each transferrer and recipient must date, sign and note the time on the chain-of-custody form.

3. In shipping, the container must be sealed with tape, and bear the sender's signature across the area of bonding at the ends of the tape to prevent undetected tampering. Each sampling jar should be taped and signed as well. Scotch tape works well.

4. Write "sealed by" and sign in the "Remarks" box at the bottom of the form before sealing the box. Place form in a plastic bag and seal it inside the box.


5. The "REMARKS" section of the form is for documenting details such as:
 - a) Correlation of sample numbers if samples are split between labs.
 - b) QC numbers when lab is logging in the samples.
 - c) Sample temperature and condition when received by lab.
 - d) Preservation notation.
 - e) pH of samples when opened for analysis (if acidified).
 - f) Sampling observation or sampling problem.

6. The chain-of-custody form should be included inside the shipping container. A copy should be sent to the project manager.

7. When the samples are received by the lab, the chain-of-custody form will be dated, signed, and the time noted by a laboratory representative. The form will be retained in the laboratory files along with shipping bills and receipts .

8. At the time of receipt of samples by the laboratory, the shipping container will be inspected and the sealing signature will be checked. The samples will be inspected for condition and bubbles, and the temperature of a representative sample container will be measured

externally by a thermocouple probe (held tightly between two samples) and recorded. The laboratory QC numbers will be placed on the labels, in the accession log, and on the chain-of-custody form. If samples are acidified, their pH will be measured by narrow range pH paper at the time of opening for analysis. All comments concerning procedures requiring handling of the samples will be dated and initialed on the form by the laboratory person performing the procedure. A copy of the completed chain-of-custody form with the comments on sample integrity will be returned to the sampler.

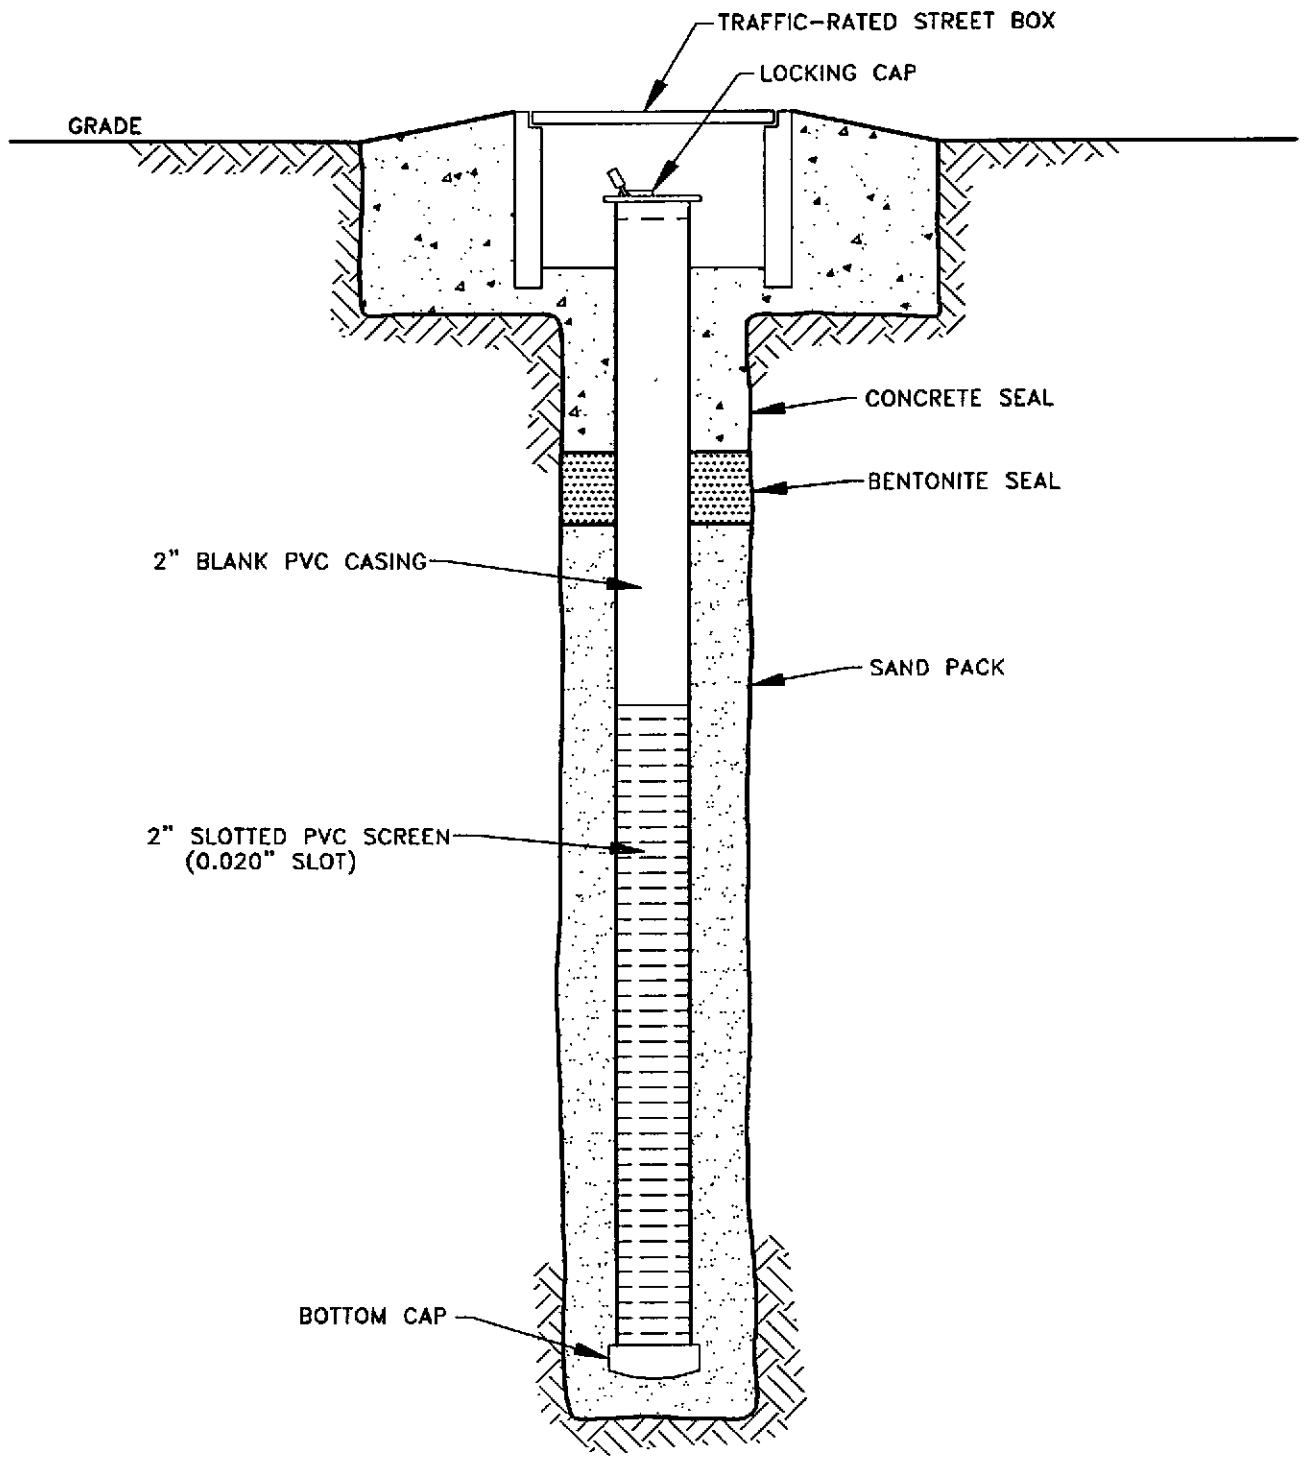

GROUNDWATER
TECHNOLOGY

NOT TO SCALE

**TYPICAL MONITORING
WELL CONSTRUCTION**

CLIENT:
CHEVRON U.S.A. PRODUCTS CO.
SERVICE STATION No. S0800

FILE: MONWELL

PROJECT NO:
020200105

PM
RG/PE
EW

LOCATION:
800 CENTER STREET
OAKLAND, CALIFORNIA

REV: 1

DES: MAC

DET: ML

DATE:
3/27/95

FIGURE: